




"Teamwork & Communication"

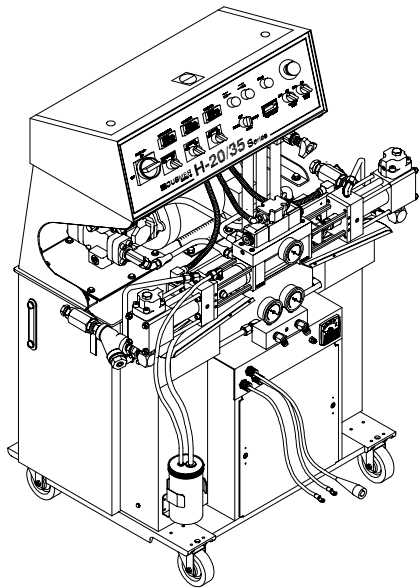

H-20/35 Series Proportioning Unit

Parts Identification Manual 42942-ID

April 5, 2000

Issue 2

GUSMER CORPORATION®

A Subsidiary of Gusmer Machinery Group, Inc.

One Gusmer Drive

Lakewood, New Jersey, USA 08701-8055


Toll Free 1-800-367-4767 (USA & Canada)

Phone: (732) 370-9000

Fax: (732) 905-8968

Copyright 2000, GUSMER CORPORATION®

<http://www.gusmer.com>

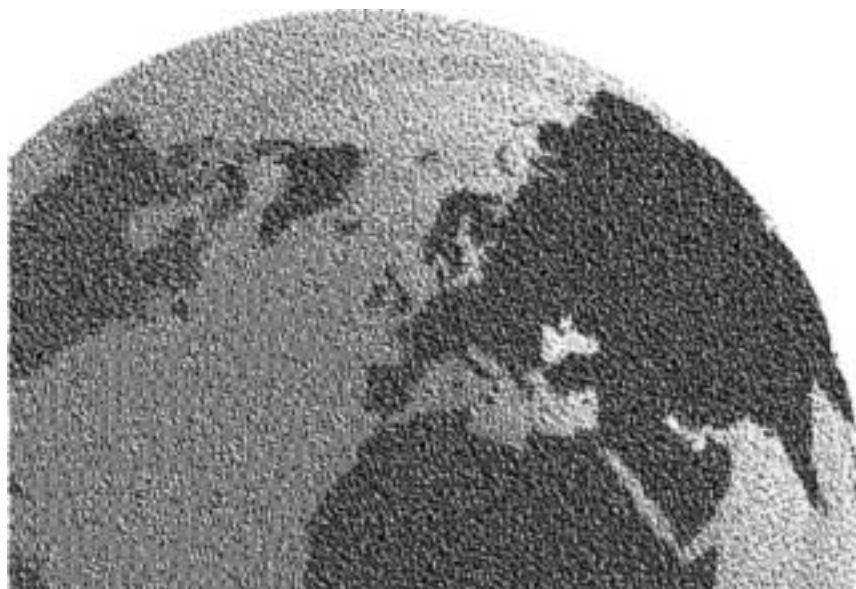

NOTICE: This manual contains important information for your GUSMER equipment. Read and retain for future reference.

NOTICE: *The equipment described in this technical manual must only be operated or serviced by properly trained individuals, thoroughly familiar with the operating instructions and limitations of the equipment. For technical service, call your local distributor. Call: 1-800-FOR-GSMR (1-800-367-4767) for the name and telephone number of your local distributor.*

NOTICE: *All statements, information and data given herein are believed to be accurate and reliable but are presented without guarantee, warranty or responsibility of any kind expressed or implied. Statements or suggestions concerning possible use of GUSMER equipment are made without representation or warranty that any such use is free of patent infringement, and are not recommendations to infringe any patent. The user should not assume that all safety measures are indicated or that other measures may not be required*

CONTENTS

LIST OF FIGURES4

LIST OF TABLES4

WARRANTY5

H-20/35 SERIES ASSEMBLIES.....6

 FINAL ASSEMBLY6

 BASE ASSEMBLY.....8

 PUMPLINE ASSEMBLY10

 HYDRAULIC CYLINDER WITH SPACERS.....12

 PROPORTIONING PUMP ASSEMBLY14

 PRIMARY HEATER ASSEMBLY16

 REVERSING SWITCH ASSEMBLY18

 LUBE RESERVOIR HOSE ASSEMBLY.....19

ELECTRICAL COMPONENTS.....20

ELECTRICAL SCHEMATICS.....22

 230 Volt Single Phase22

 230 Volt 3 Phase28

 380 Volt 3 Phase34

INSTRUCTION MANUAL DISCREPANCY REPORT43

LIST OF FIGURES

FIGURE 1 FINAL ASSEMBLY, (PART NO. 42000-SIZE), EXPLODED VIEW	6
FIGURE 2 BASE ASSEMBLY, (PART NO. 42501-3HP-230 / 42501-1PH-230), EXPLODED VIEW	8
FIGURE 3 PUMPLINE ASSEMBLY, (PART NO. 42430-SIZE), EXPLODED VIEW	10
FIGURE 4 HYDRAULIC CYLINDER WITH SPACERS, (PART NO. 42511), EXPLODED VIEW	12
FIGURE 5 PROPORTIONING PUMP ASSEMBLY, (PART NO. 42400-SIZE/42450-SIZE), EXPLODED VIEW	14
FIGURE 6 PRIMARY HEATER ASSEMBLY, (PART NO. 42300-SIZE/42360-SIZE), EXPLODED VIEW	16
FIGURE 7 REVERSING SWITCH ASSEMBLY, (PART NO. 42521), EXPLODED VIEW	18
FIGURE 8 LUBE RESERVOIR HOSE ASSEMBLY, (PART NO. 15585), EXPLODED VIEW	19
FIGURE 9 ELECTRICAL COMPONENTS (SHEET 1 OF 2)	20
FIGURE 10 ELECTRICAL COMPONENTS (SHEET 2 OF 2)	21
FIGURE 11 ELECTRICAL SCHEMATIC 230 VOLT SINGLE PHASE, (SHEET 1 OF 6)	22
FIGURE 12 ELECTRICAL SCHEMATIC 230 VOLT SINGLE PHASE, (SHEET 2 OF 6)	23
FIGURE 13 ELECTRICAL SCHEMATIC 230 VOLT SINGLE PHASE, (SHEET 3 OF 6)	24
FIGURE 14 ELECTRICAL SCHEMATIC 230 VOLT SINGLE PHASE, (SHEET 4 OF 6)	25
FIGURE 15 ELECTRICAL SCHEMATIC 230 VOLT SINGLE PHASE, (SHEET 5 OF 6)	26
FIGURE 16 ELECTRICAL SCHEMATIC 230 VOLT SINGLE PHASE, (SHEET 6 OF 6)	27
FIGURE 17 ELECTRICAL SCHEMATIC 230 VOLT 3 PHASE, (SHEET 1 OF 6)	28
FIGURE 18 ELECTRICAL SCHEMATIC 230 VOLT 3 PHASE, (SHEET 2 OF 6)	29
FIGURE 19 ELECTRICAL SCHEMATIC 230 VOLT 3 PHASE, (SHEET 3 OF 6)	30
FIGURE 20 ELECTRICAL SCHEMATIC 230 VOLT 3 PHASE, (SHEET 4 OF 6)	31
FIGURE 21 ELECTRICAL SCHEMATIC 230 VOLT 3 PHASE, (SHEET 5 OF 6)	32
FIGURE 22 ELECTRICAL SCHEMATIC 230 VOLT 3 PHASE, (SHEET 6 OF 6)	33
FIGURE 23 ELECTRICAL SCHEMATIC 380 VOLT 3 PHASE, (SHEET 1 OF 6)	34
FIGURE 24 ELECTRICAL SCHEMATIC 380 VOLT 3 PHASE, (SHEET 2 OF 6)	35
FIGURE 25 ELECTRICAL SCHEMATIC 380 VOLT 3 PHASE, (SHEET 3 OF 6)	36
FIGURE 26 ELECTRICAL SCHEMATIC 380 VOLT 3 PHASE, (SHEET 4 OF 6)	37
FIGURE 27 ELECTRICAL SCHEMATIC 380 VOLT 3 PHASE, (SHEET 5 OF 6)	38
FIGURE 28 ELECTRICAL SCHEMATIC 380 VOLT 3 PHASE, (SHEET 6 OF 6)	39

LIST OF TABLES

TABLE 1 FINAL ASSEMBLIES, (PART NO. 42000-SIZE), PARTS	7
TABLE 2 BASE ASSEMBLIES, (PART NO. 42501-3PH-230 / 42501-1PH-230), PARTS	9
TABLE 3 PUMPLINE ASSEMBLY, (PART NO. 42430-SIZE), PARTS	11
TABLE 4 HYDRAULIC CYLINDER WITH SPACERS, (PART NO. 42511), PARTS	13
TABLE 5 PROPORTIONING PUMP ASSEMBLY, (PART NO. 42400-SIZE/42450-SIZE), PARTS	15
TABLE 6 PRIMARY HEATER ASSEMBLY, (PART NO. 42300-SIZE/42360-SIZE), PARTS	17
TABLE 7 REVERSING SWITCH ASSEMBLY, (PART NO. 42521), PARTS LIST	18
TABLE 8 LUBE RESERVOIR HOSE ASSEMBLY, (PART NO. 15585), PARTS LIST	19
TABLE 9 ELECTRICAL SCHEMATIC, (PARTS LIST)	40

WARRANTY

Gusmer Corporation (Gusmer) provides a limited warranty to the original purchaser (Customer) of Gusmer manufactured parts and equipment (Product) against any defects in material or workmanship for a period of one year from the date of shipment from Gusmer facilities.

In the event Product is suspected to be defective in material or workmanship, it must be returned to Gusmer, freight prepaid. If Product is found to be defective in material or workmanship, as determined solely by Gusmer, Gusmer will issue full credit to Customer for the freight charges incurred in returning the defective Product, and either credit will be issued for the replacement cost of the Product or a replacement part will be forwarded no-charge, freight prepaid to Customer.

This warranty shall not apply to Product Gusmer finds to be defective resulting from: installation, use, maintenance, or procedures not accomplished in accordance with our instructions; normal wear; accident; negligence; alterations not authorized in writing by Gusmer; use of "look alike" parts not manufactured or supplied by Gusmer; or Product used in conjunction with any other manufacturer's pumping or proportioning equipment. Further, the terms and conditions of this warranty shall not apply to services or repairs made to Product by any third party not authorized in writing by Gusmer. For such Product, a written estimate will be submitted to Customer at a nominal service charge, itemizing the cost for repair. Disposition of Product will be done in accordance with the terms stated on the written estimate.

The warranty provisions applied to product that are not manufactured by Gusmer will be solely in accordance with the warranty provided by the original manufacturer of the product.

GUSMER MAKES NO WARRANTY WHATSOEVER AS TO THE MERCHANTABILITY OF, OR SUITABILITY FOR, ITS PRODUCT TO PERFORM ANY PARTICULAR PURPOSE. CREDIT FOR, OR REPLACEMENT OF, PRODUCT DEFECTIVE IN MATERIAL OR WORKMANSHIP SHALL CONSTITUTE COMPLETE FULFILLMENT OF GUSMER OBLIGATIONS TO CUSTOMER. NO OTHER WARRANTY, EXPRESSED OR IMPLIED ON ANY PRODUCT IT MANUFACTURES AND/OR SELLS, WILL BE RECOGNIZED BY GUSMER UNLESS SAID WARRANTY IS IN WRITING AND APPROVED BY AN OFFICER OF GUSMER.

Under no circumstances shall Gusmer be liable for loss of prospective or speculative profits, or special indirect, incidental or consequential damages. Further, Gusmer shall have no liability for any expenses including, but not limited to personal injury or property damage resulting from failure of performance of the product, use of the product, or application of the material dispensed through the product. Any information provided by Gusmer that is based on data received from a third source, or that pertains to product not manufactured by Gusmer, while believed to be accurate and reliable, is presented without guarantee, warranty, or responsibility of any kind, expressed or implied.

Gusmer through the sale, lease, or rental of Product in no way expresses or implies a license for the use of, nor encourages the infringement of any patents or licenses.

To insure proper validation of your warranty, please complete the warranty card and return it to Gusmer within two weeks of receipt of equipment.

Revised 11/12/98

H-20/35 SERIES ASSEMBLIES

FINAL ASSEMBLY

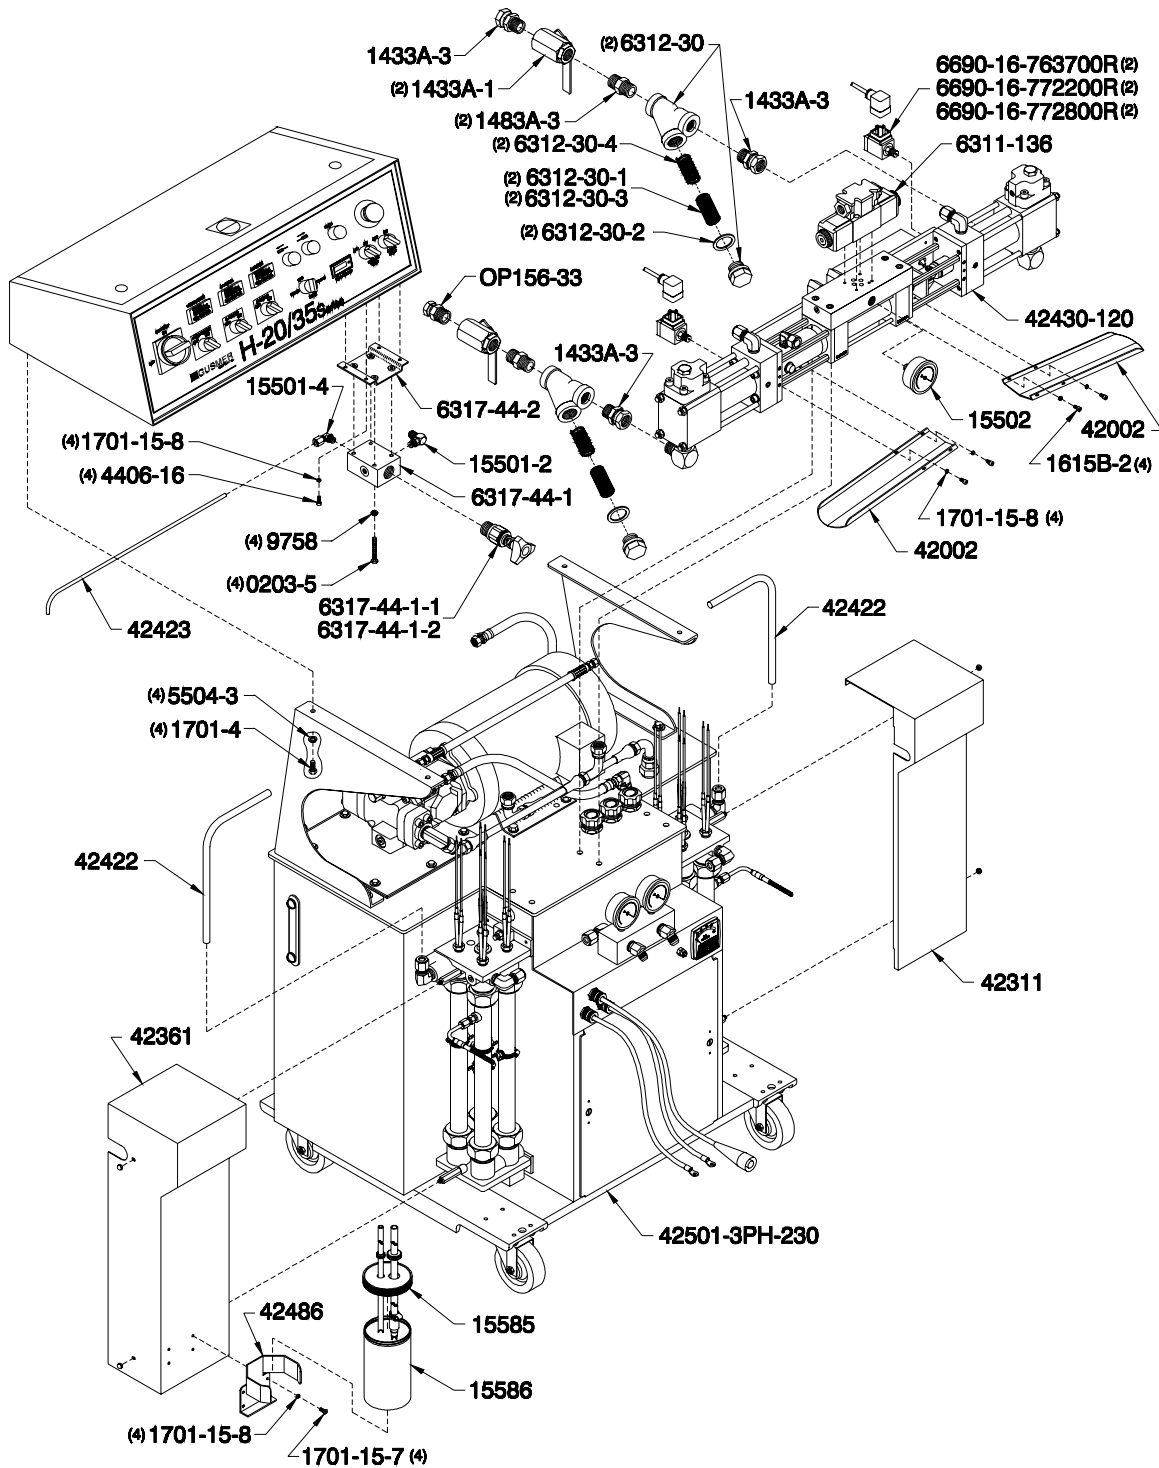


Figure 1 Final Assembly, (Part No. 42000-SIZE), Exploded View

NOTE: Consult page 20 of this Manual for Electrical Components not called out in this Assembly.

TABLE 1 FINAL ASSEMBLIES, (PART NO. 42000-SIZE), PARTS

Part Number	Description	Quantity
0203-5	Hex Head Cap Screw	1
1433A-1	Ball Valve	2
1433A-3	Swivel Union	3
1483A-3	Hex Nipple	2
1615B-2	Socket Head Cap Screw	4
1701-15-7	Button Head Machine Screw	4
1701-15-8	Helical Lockwasher	12
1701-4	Hex Head Cap Screw	4
4406-16	Socket Head Cap Screw	4
5504-3	Helical Lockwasher	4
6311-136	Directional Valve	1
6312-30	Strainer	2
6312-30-1	Strainer Screen (30 Mesh) (Includes 6312-30-4)	2
6312-30-2	Gasket	2
6312-30-3	Strainer Screen (80 Mesh) (Includes 6312-30-4)	2
6312-30-4	Spring	2
6317-44-1	Remote Compensator	1
6317-44-1-1	Relief Valve 0-725 PSI	1
6317-44-1-2	Relief Valve 0-1450 PSI	1
6317-44-2	Remote Compensator Bracket	1
6690-16-763700R	Pressure Switch	1
6690-16-772200R	Pressure Switch	1
6690-16-772800R	Pressure Switch	1
9758	Helical Lockwasher	4
15501-2	O-Ring Elbow	1
15501-4	O-Ring Tube Elbow	1
15502	0-2000 PSI Liquid Fill Gauge	1
15585	Lube Reservoir Hose Assembly	1
15586	Lube Bottle	1
42002	Drip Pan	2
42422	A/R Pump/Heater Tube Assembly	2
42423	Compensator Tube Assembly	1
42311	R - Preheater Cover	1
42361	A - Preheater Cover	1
42430-120	Pumpline Assembly	1
42486	Lubr Reservoir Bracket	1
42501-3PH-230	Base Assembly	1
OP156-33	Swivel Union	1

BASE ASSEMBLY

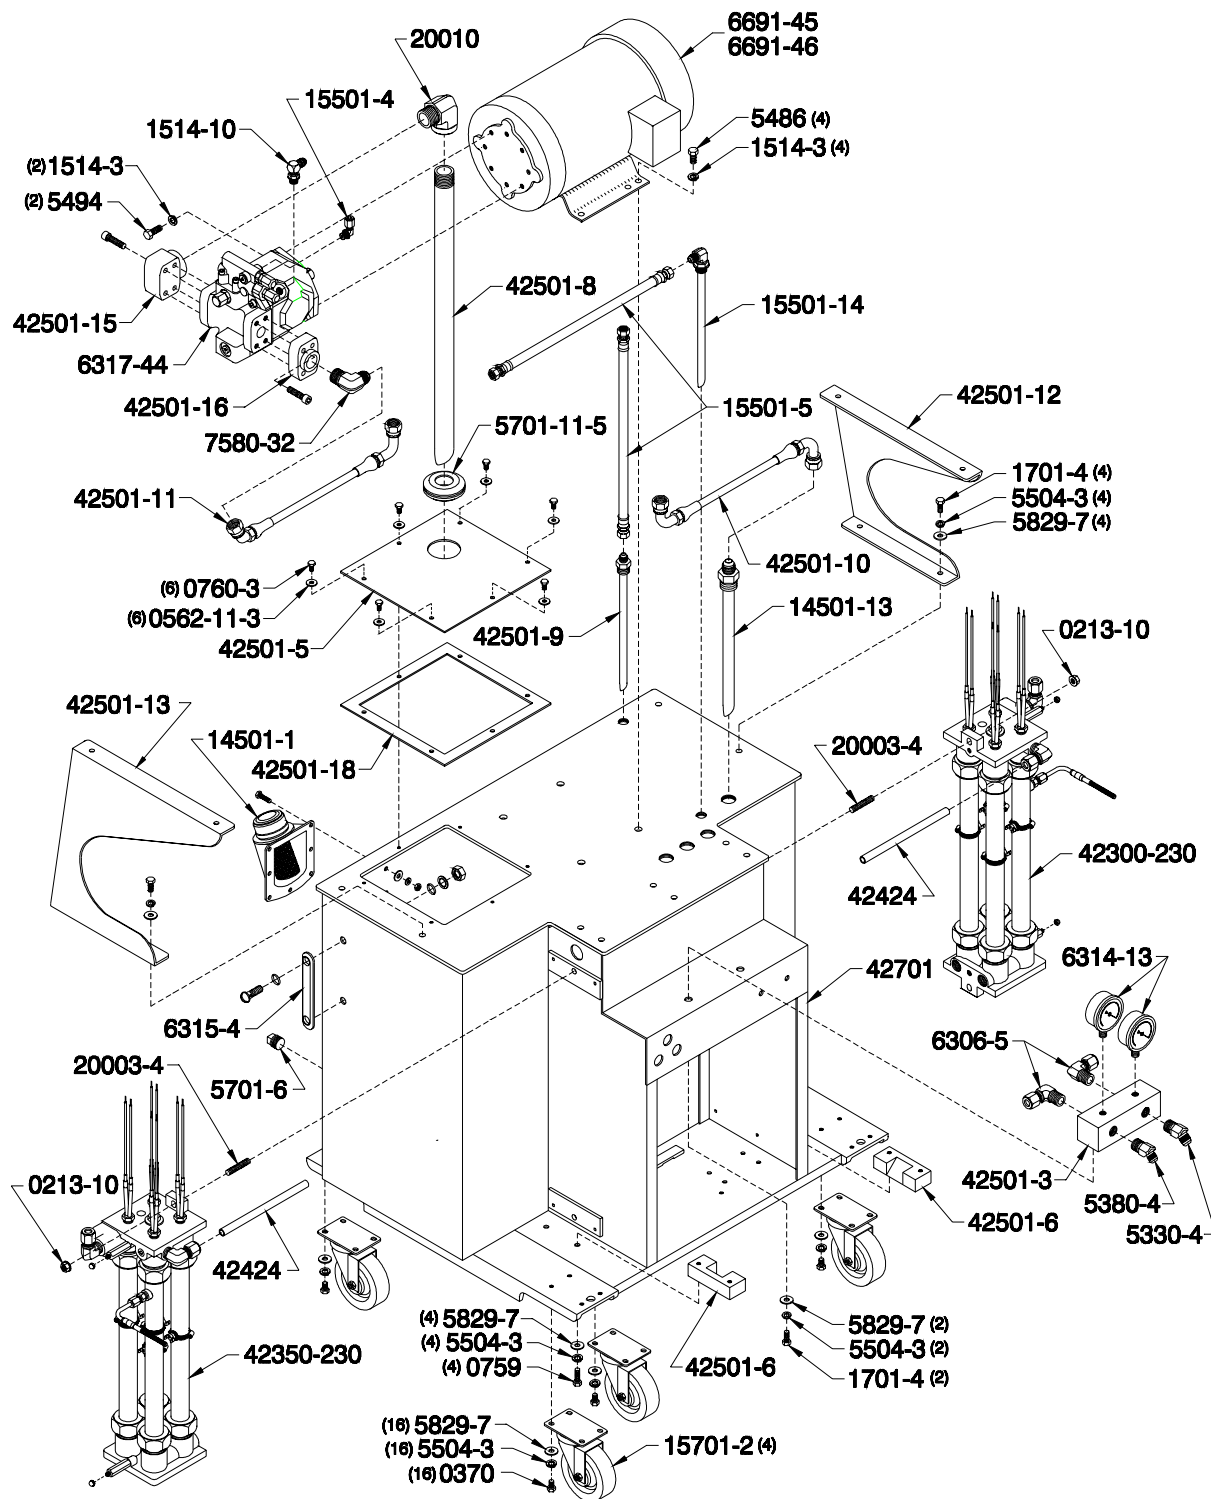


Figure 2 Base Assembly, (Part No. 42501-3HP-230 / 42501-1PH-230), Exploded View

TABLE 2 BASE ASSEMBLIES, (PART NO. 42501-3PH-230 / 42501-1PH-230), PARTS

Part Number	Description	Quantity
0213-10	Flange Nut	2
0370	Hex Head Cap Screw	16
0562-11-3	Flat Washer	6
0759	Hex Head Cap Screw	4
0760-3	Hex Head Cap Screw	6
1514-10	Hose Elbow	1
1514-3	Helical Lockwasher	6
1701-4	Hex Head Cap Screw	6
5330-4	Hose Elbow	1
5380-4	Hose Elbow	1
5486	Hex Head Cap Screw	4
5494	Hex Head Cap Screw	2
5504-3	Helical Lockwasher	26
5701-11-5	Grommet	1
5701-6	Reservoir Drain Plug	1
5829-7	Flat Washer	26
6306-5	Tube Elbow	2
6314-13	0-3000 PSI Liquid Fill Gauge	2
6315-4	Fluid Level Gauge	1
6317-44	Hydraulic Pump	1
6691-45	5 HP Motor (3 Phase 230 Volts)	1
6691-46	5 HP Motor (Single Phase 230 Volts)	1
7580-32	Elbow	1
14501-1	Hydraulic Oil Filler	1
14501-13	Hydraulic Reservoir Return	1
15501-14	Hydraulic Reservoir Return	1
15501-4	O-Ring Tube Elbow	1
15501-5	Bleed Hose Assembly	2
15701-2	Swivel Castor	4
20003-4	Threaded Rod	2
20010	Street Elbow	1
42300-230	R - Primary Heater 6000W	1
42350-230	A - Primary Heater 6000W	1
42424	Outlet Tube Assembly	2
42501-10	T-Port Hose	1
42501-11	P-Port Hose	1
42501-12	Console Bracket (Right)	1
42501-13	Console Bracket (Left)	1
42501-15	Suction Flange	1
42501-16	Outlet Flange	1
42501-18	Access Cover Plate Gasket	1
42501-3	Chemical Manifold	1
42501-5	Tank Cover Plate	1
42501-6	Preheater Mounting Blocks	2
42501-8	Suction Tube	1
42501-9	Dip Tube	1
42701	Hydraulic Tank	1

PUMPLINE ASSEMBLY

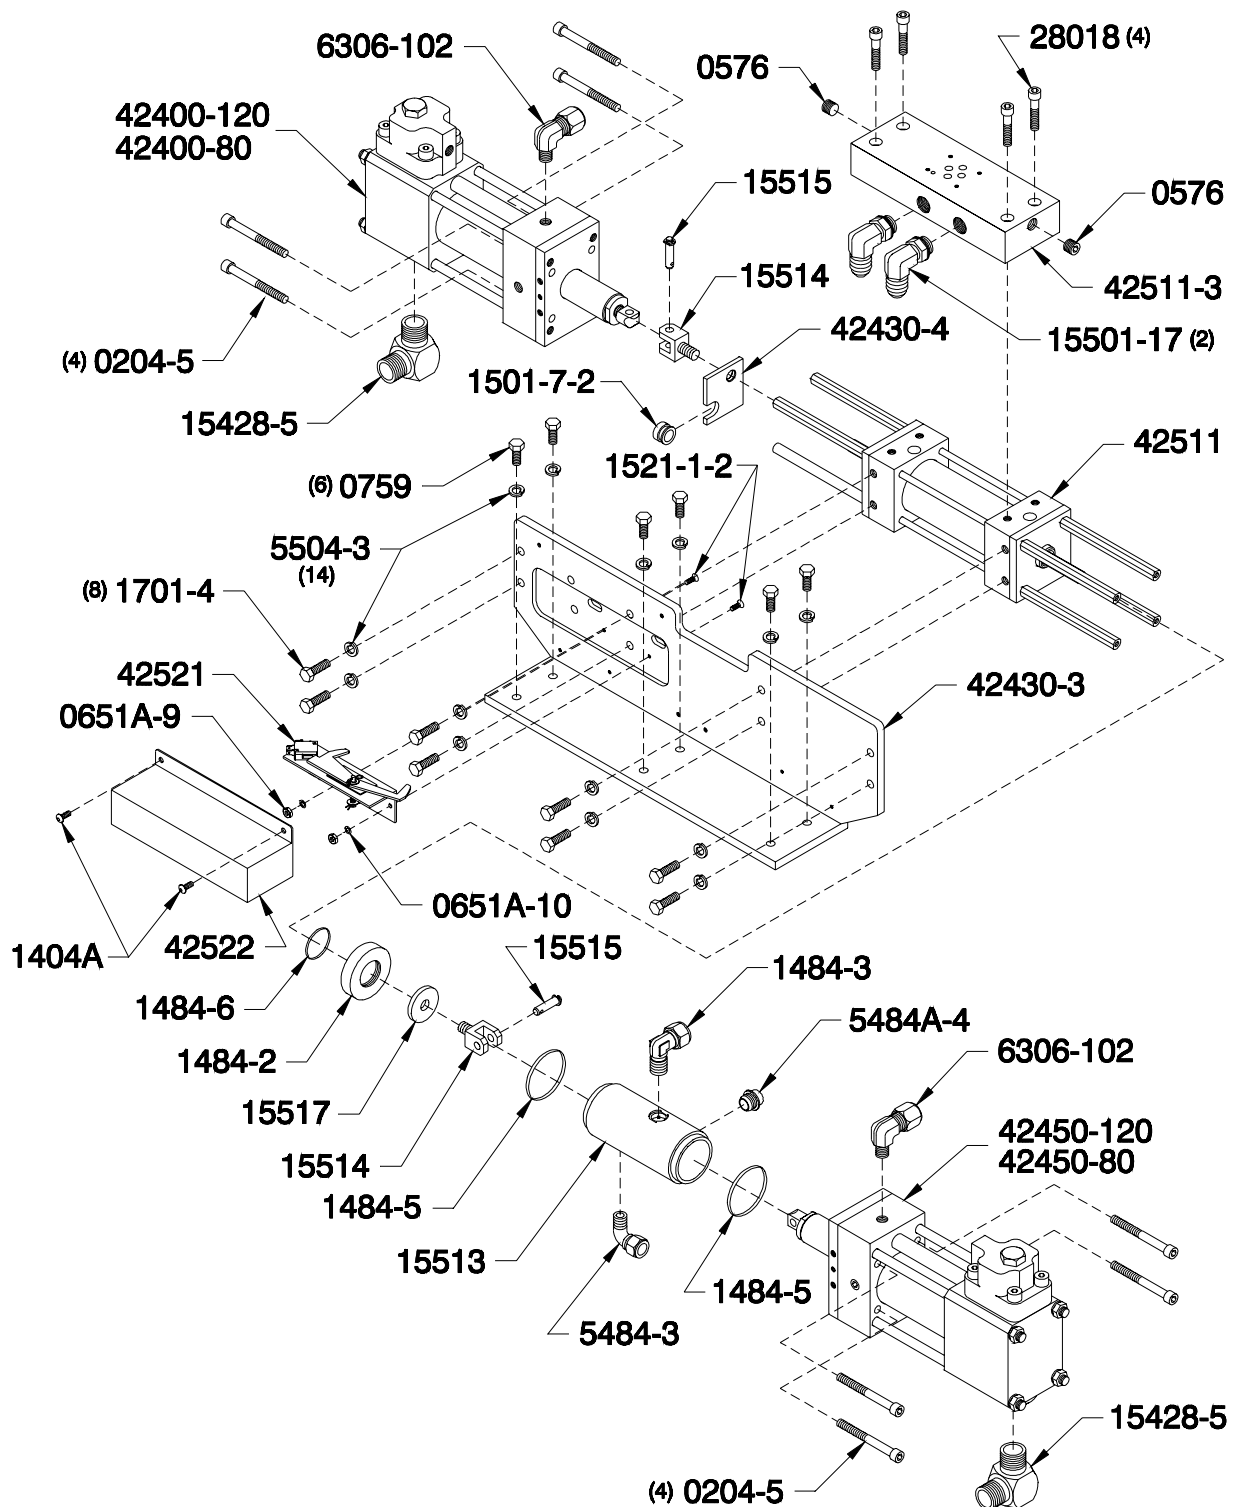


Figure 3 Pumpline Assembly, (Part No. 42430-SIZE), Exploded View

TABLE 3 PUMPLINE ASSEMBLY, (PART NO. 42430-SIZE), PARTS

Part Number	Description	Quantity
0204-5	Socket Head Cap Screw	8
0576	Flush Seal Pipe Plug	2
0651A-10	Lockwasher	2
0651A-9	Hex Nut	2
0759	Hex Head Cap Screw	6
1404A	Button Head Cap Screw	2
1484-2	Lube Cylinder Adapter Plate	1
1484-3	Male Elbow	1
1484-5	O-Ring	2
1484-6	O-Ring	1
1501-7-2	Bronze Bushing	1
1521-1-2	Flat Head Cap Screw	2
1701-4	Hex Head Cap Screw	8
5484-3	Lube Hose Fitting	1
5484A-4	Polyethylene Pipe Plug	1
5504-3	Helical Lockwasher	1
6306-102	Tube Elbow	2
15428-5	Male Elbow	2
15501-17	O-Ring Elbow	2
15513	Iso Lube Cylinder	1
15514	Hydraulic Cylinder Clevis	2
15515	Clevis Pin	2
15517	Baffle	1
28018	Socket Head Cap Screw	4
42400-120	Resin Proportioning Pump Assembly	1
42400-80	Resin Proportioning Pump Assembly	1
42430-3	Pump Mounting L-Bracket	1
42430-4	Activator Plate	1
42450-120	Iso Proportioning Pump Assembly	1
42450-80	Iso Proportioning Pump Assembly	1
42511	Hydraulic Cylinder with Spacers	1
42511-3	Hydraulic Manifold	1
42521	Reversing Switch Assembly	1
42522	Reversing Switch Cover	1

HYDRAULIC CYLINDER WITH SPACERS

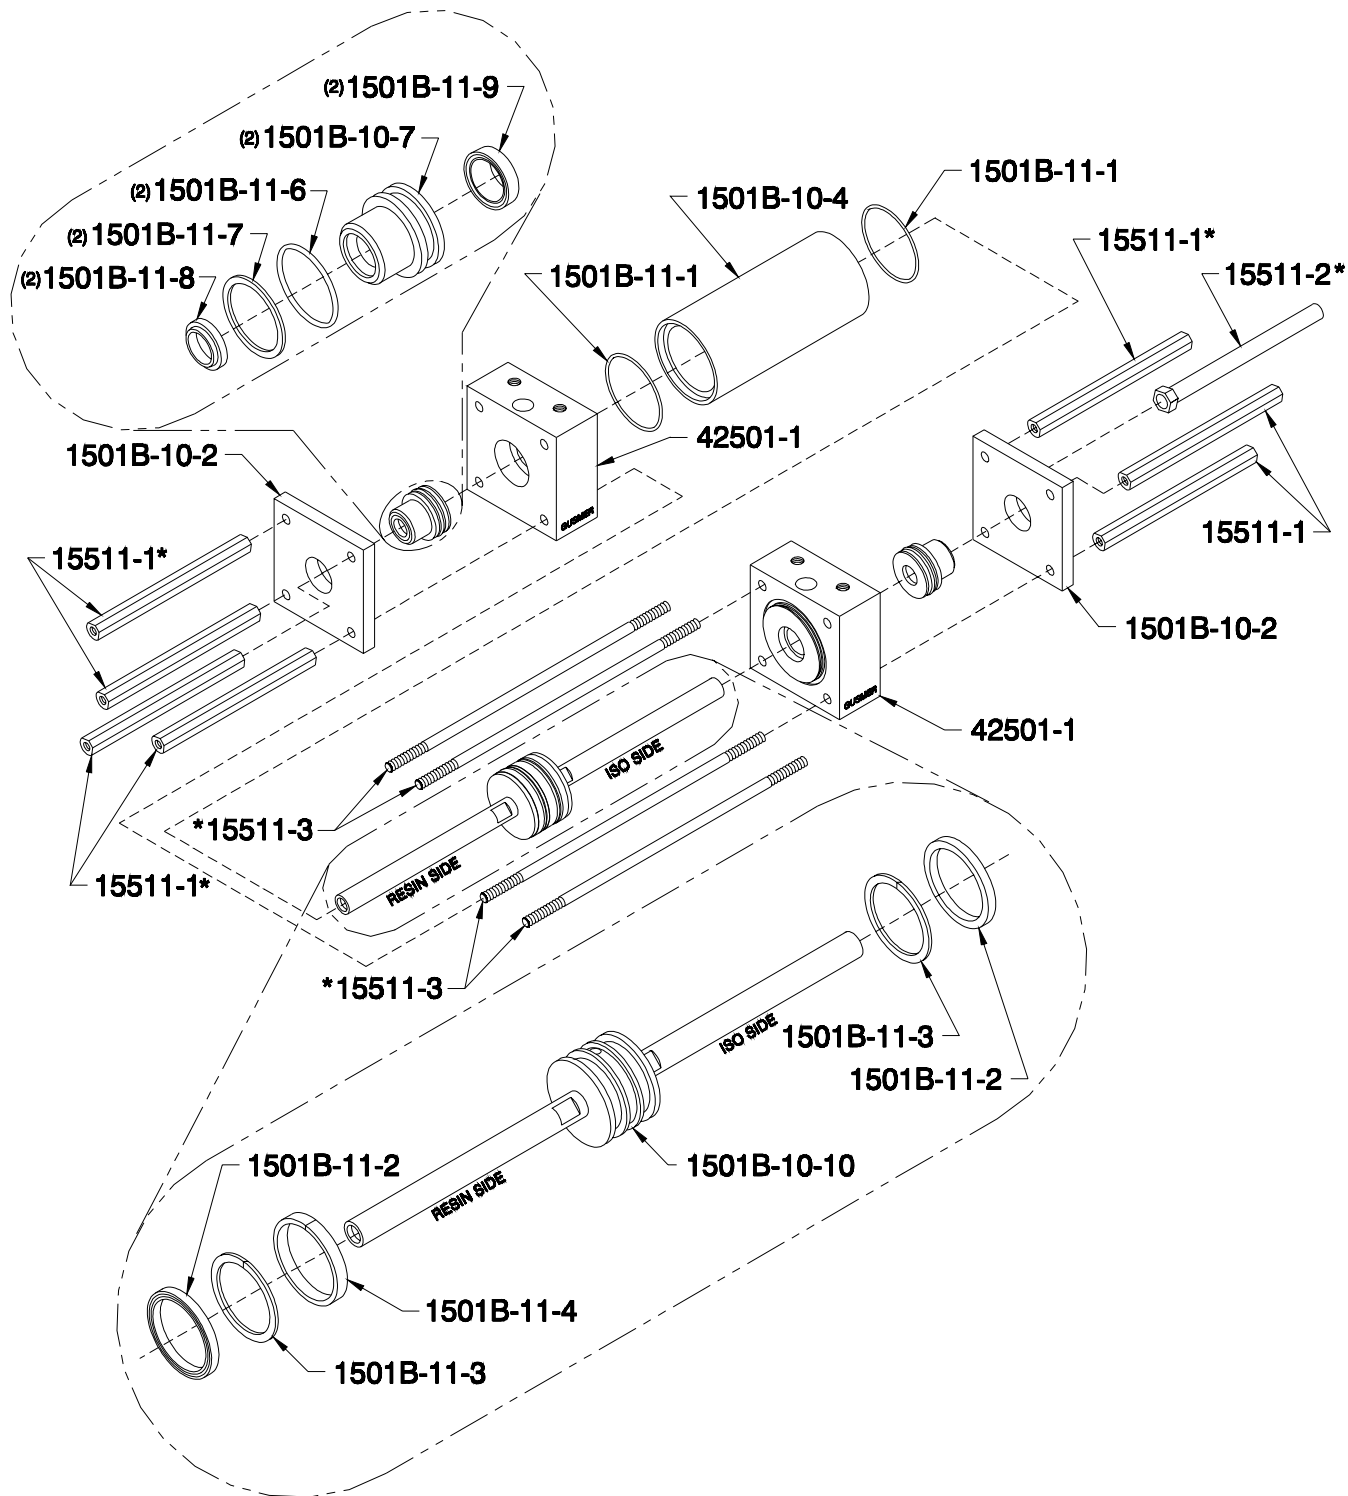


Figure 4 Hydraulic Cylinder with Spacers, (Part No. 42511), Exploded View

** Torque to 200 Inch-Pounds*

TABLE 4 HYDRAULIC CYLINDER WITH SPACERS, (PART NO. 42511), PARTS

Part Number	Description	Quantity
1501B-10-10	Piston Assembly	1
1501B-10-2	Retainer Plate	2
1501B-10-4	Cylinder Body	1
1501B-10-7	Rod Bushing	1
1501B-11-1	O-Ring	2
1501B-11-2	U-Cup	2
1501B-11-3	Back Up Ring	2
1501B-11-4	Teflon Glass Wear Ring	1
1501B-11-6	O-Ring	1
1501B-11-7	Back Up Ring	1
1501B-11-8	Rod Wiper	1
1501B-11-9	Shaft Seal	1
15511-1	Proportioning Pump Spacer (<i>Torque to 200 Inch-Pounds</i>)	7
15511-2	Reversing Switch Pump Spacer (<i>Torque to 200 Inch-Pounds</i>)	1
15511-3	Hydraulic Cylinder Tie Rod (<i>Torque to 200 Inch-Pounds</i>)	4
42501-1	Port Block	2

PROPORTIONING PUMP ASSEMBLY

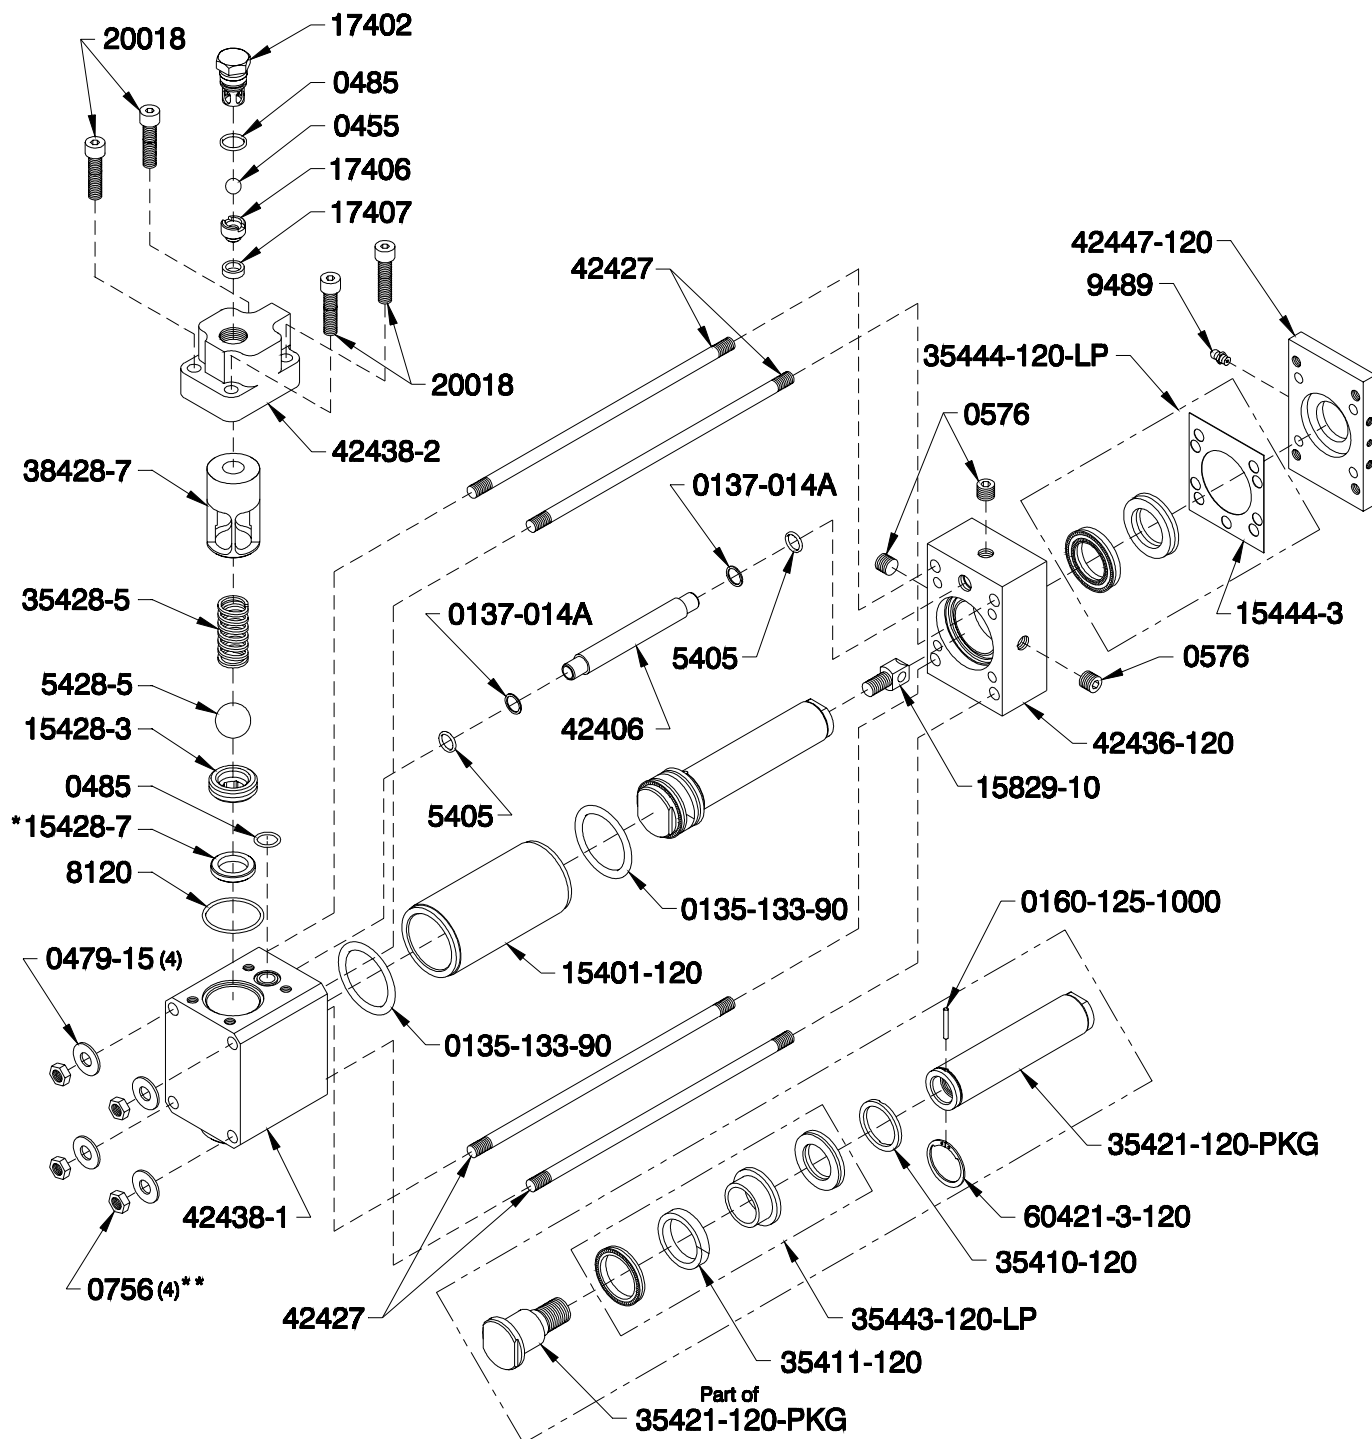


Figure 5 Proportioning Pump Assembly, (Part No. 42400-SIZE/42450-SIZE), Exploded View

* Torque to 50 FT-LBS

** Torque to 30 FT-LBS

TABLE 5 PROPORTIONING PUMP ASSEMBLY, (PART NO. 42400-SIZE/42450-SIZE), PARTS

Part Number	Description	Quantity
0135-133-90	O-Ring	2
0137-014A	Back Up Ring	2
0160-125-1000	Dowel Pin	1
14556-6	Dowel Pin	1
0455	Valve Ball	1
0479-15	Packing Support Washer	4
0485	O-Ring	2
0576	Flush Seal Pipe Plug	3
0756	Hex Nut (<i>Torque to 30 FT-LBS</i>)	4
5405	O-Ring	2
5428-5	Valve Ball	1
8120	O-Ring	1
9489	Grease Fitting (Resin Side ONLY)	1
15401-120	Pump Cylinder	1
15401-80	Pump Cylinder	1
15428-3	Valve Ball Seat (<i>Torque to 50 FT-LBS</i>)	1
15428-7	Seat Seal	1
15444-3	Gasket	1
15829-10	Pump Clevis	1
17402	Check Valve Retainer	1
17406	Check Valve Seat	1
17407	Check Valve Seal	1
20018	Socket Head Cap Screw	4
35410-120	Piston Support Washer	1
35410-80	Piston Support Washer	1
35411-120	Wear Ring	1
35410-80	Wear Ring	1
35421-120-PKG	Piston Rod with Head	1
35421-80-PKG	Piston Rod with Head	1
35428-5	Spring	1
35443-120-LP	Piston Lip Seal Set	1
35443-80-LP	Piston Lip Seal Set	1
35444-120-LP	Cylinder Lip Seal Set	1
35444-80-LP	Cylinder Lip Seal Set	1
38428-7	Inlet Ball Sleeve & Stop	1
42406	Crossover Tube	1
42427	Pump Tie Rod	4
42436-120	Outlet Pump Flange	1
42436-80	Outlet Pump Flange	1
42438-1	Lower Pump Base	1
42438-2	Upper Pump Base	1
42447-120	R - Retaining Flange	1
60421-3-120	Retaining Ring	1
60421-3-80	Retaining Ring	1

PRIMARY HEATER ASSEMBLY

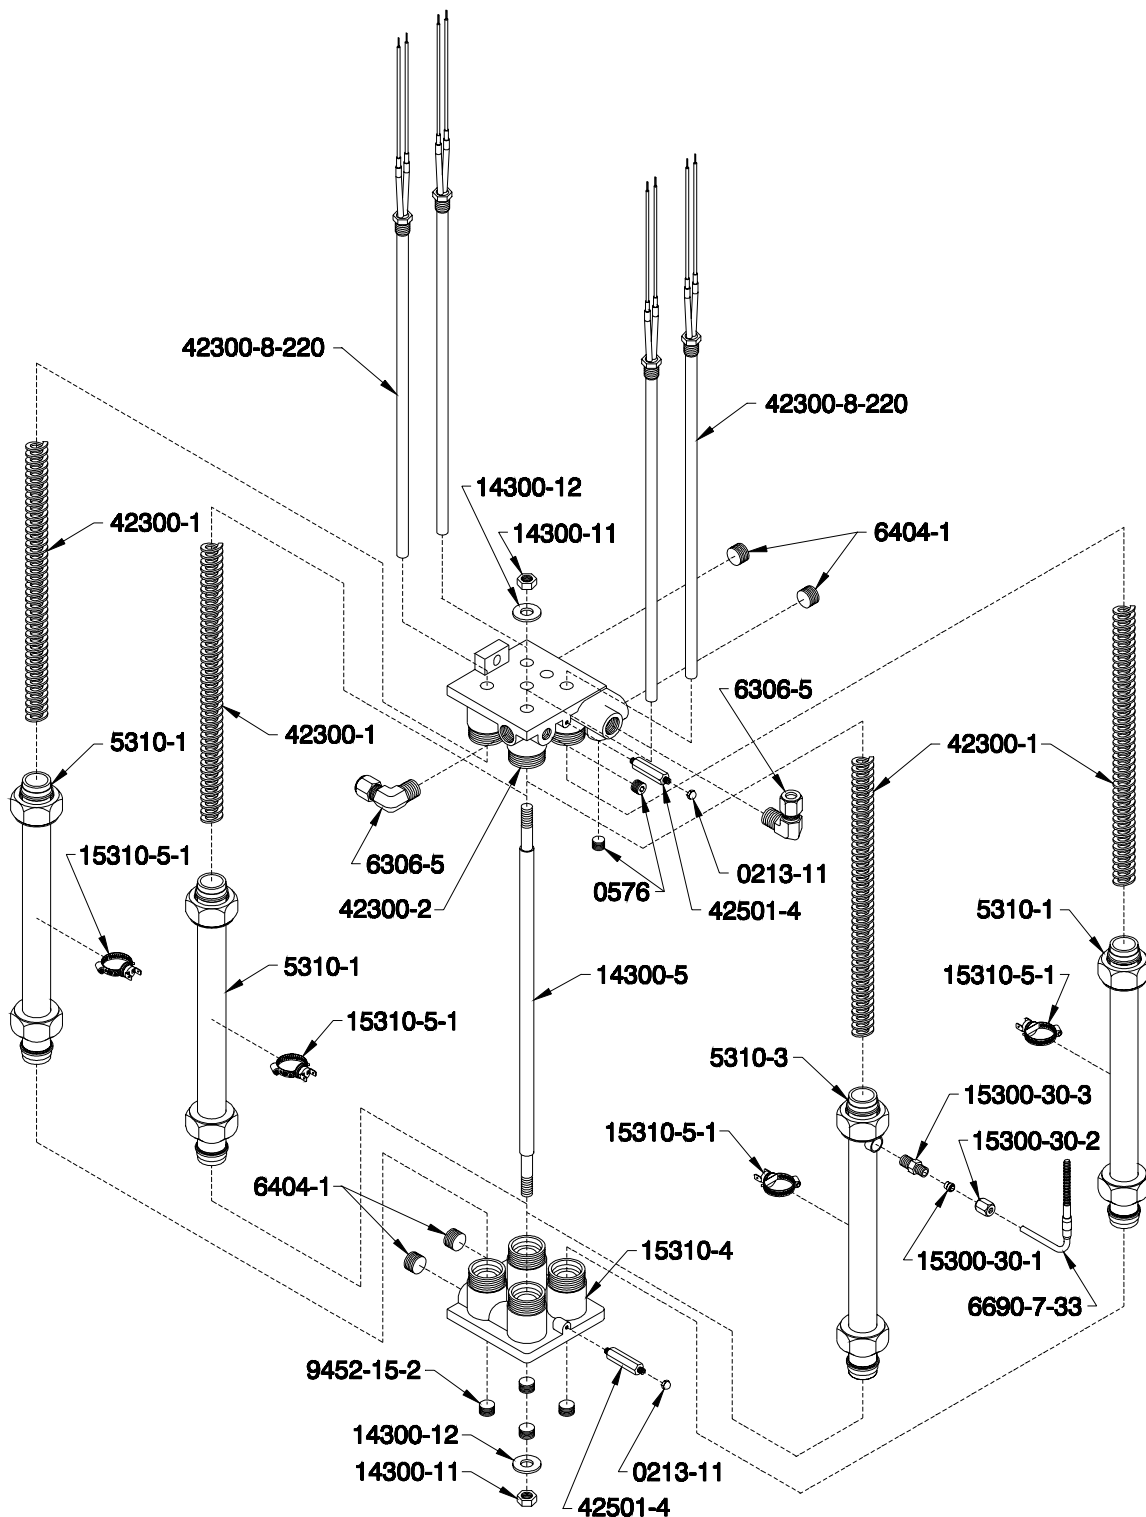


Figure 6 Primary Heater Assembly, (Part No. 42300-SIZE/42360-SIZE), Exploded View

TABLE 6 PRIMARY HEATER ASSEMBLY, (PART NO. 42300-SIZE/42360-SIZE), PARTS

Part Number	Description	Quantity
0213-11	Acorn Nut	2
0576	Flush Seal Pipe Plug	2
5310-1	Heat Exchanger	3
5310-3	Heat Exchanger	1
6306-5	Tube Elbow	2
6404-1	Flush Seal Pipe Plug	4
6690-7-33	Thermocouple	1
9452-15-2	Flush Seal Pipe Plug	4
14300-11	Hex Nut	2
14300-12	Flat Washer	2
14300-5	Tie Rod	1
15300-30-1	Ferrule	1
15300-30-2	Nut	1
15300-30-3	1/4 Tube Body	1
15310-4	Preheater Flange	1
15310-5-1	Thermostat	4
42300-1	Spring	5
42300-2	R - Preheater Flange	1
42300-8-220	Heating Element 1500W	4
42501-4	Preheater Cover Standoff	2

REVERSING SWITCH ASSEMBLY

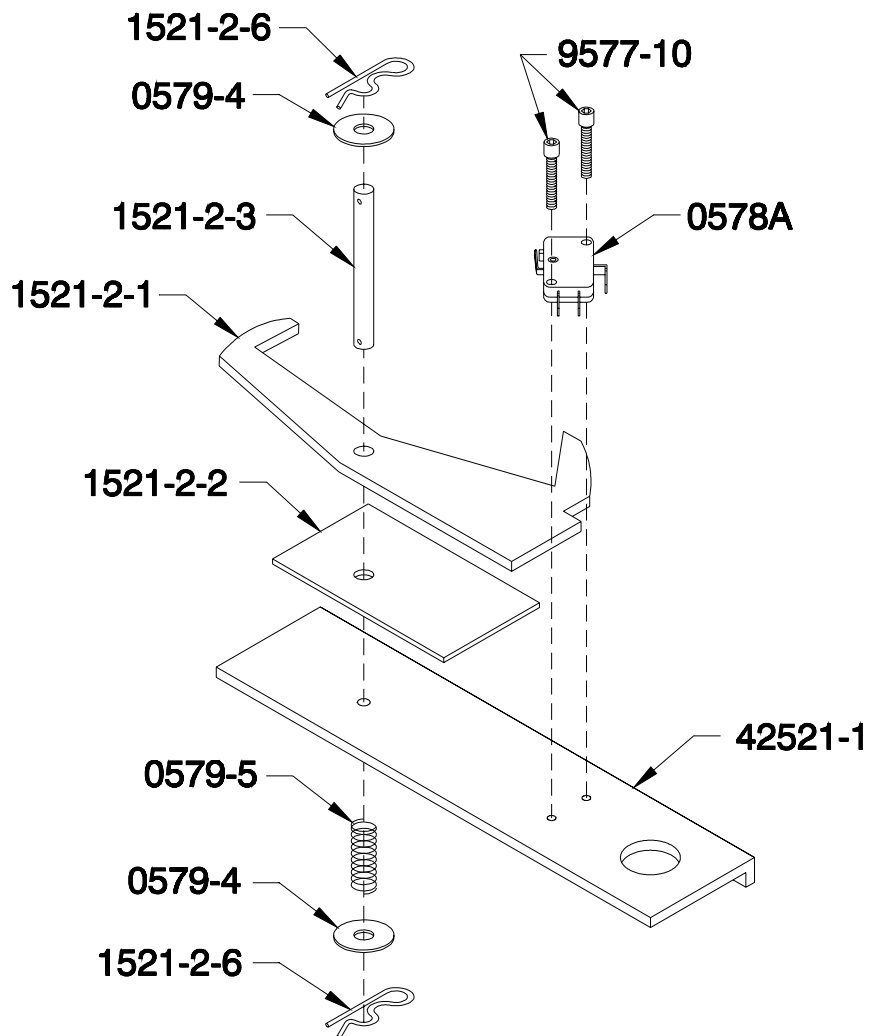
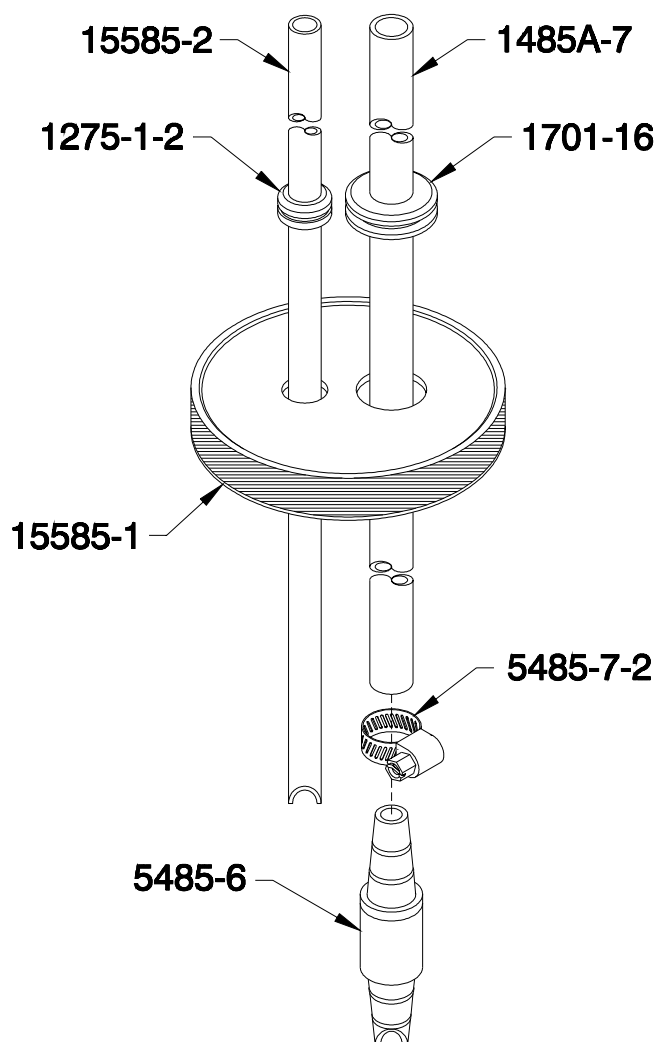


Figure 7 Reversing Switch Assembly, (Part No. 42521), Exploded View

TABLE 7 REVERSING SWITCH ASSEMBLY, (PART NO. 42521), PARTS LIST

Part Number	Description	Quantity
0578A	Reversing Switch	1
0579-4	Flat Washer	2
0579-5	Spring	1
1521-2-1	Reversing Switch Rocker Arm	1
1521-2-2	Rocker Arm Slide Pad	1
1521-2-3	Rocker Arm Pin	1
1521-2-6	Hitch Pin Clip	2
9577-10	Socket Head Cap Screw	2
42521-1	Reversing Switch Bracket	1

LUBE RESERVOIR HOSE ASSEMBLY**Figure 8 Lube Reservoir Hose Assembly, (Part No. 15585), Exploded View****TABLE 8 LUBE RESERVOIR HOSE ASSEMBLY, (PART NO. 15585), PARTS LIST**

Part Number	Description	Quantity
1275-1-2	Rubber Grommet	1
1485A-7	Supply Line	1
1701-16	13/16 OD Grommet	1
5485-6	Lube Reservoir Check Valve	1
5485-7-2	Hose Clamp	1
15585-1	Lube Bottle Cap	1
15585-2	Return Line	1

ELECTRICAL COMPONENTS

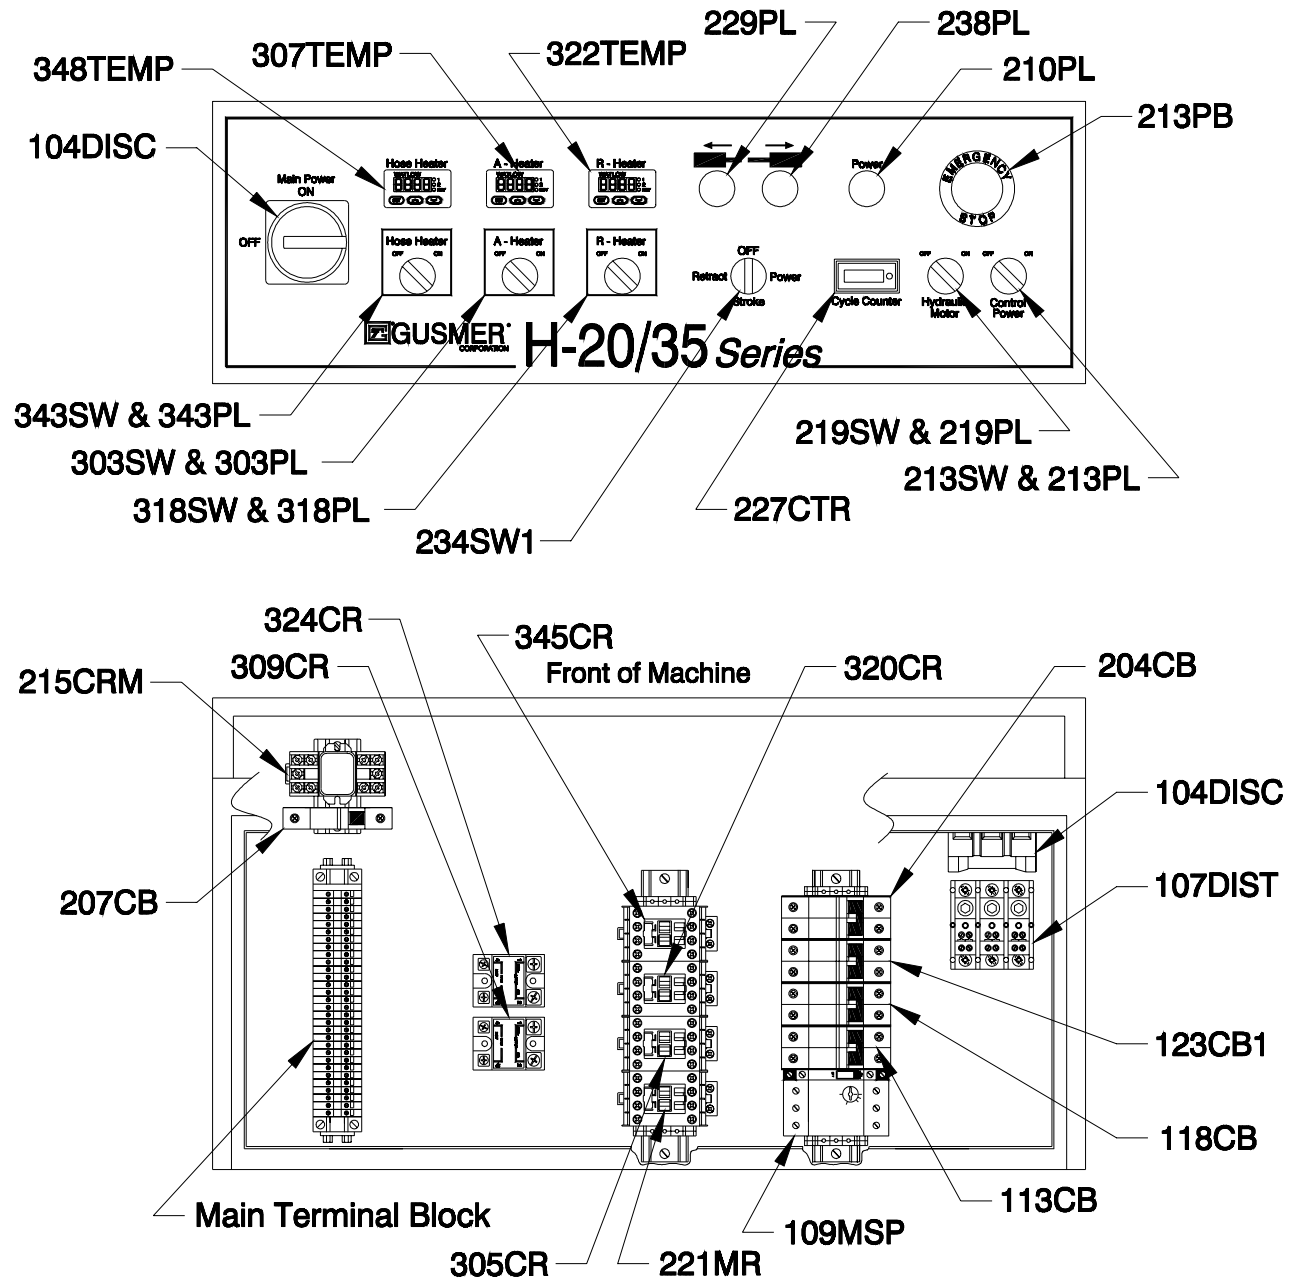


Figure 9 Electrical Components (Sheet 1 of 2)

Note: For schematic symbol part numbers and descriptions see Table 9 on page 40.

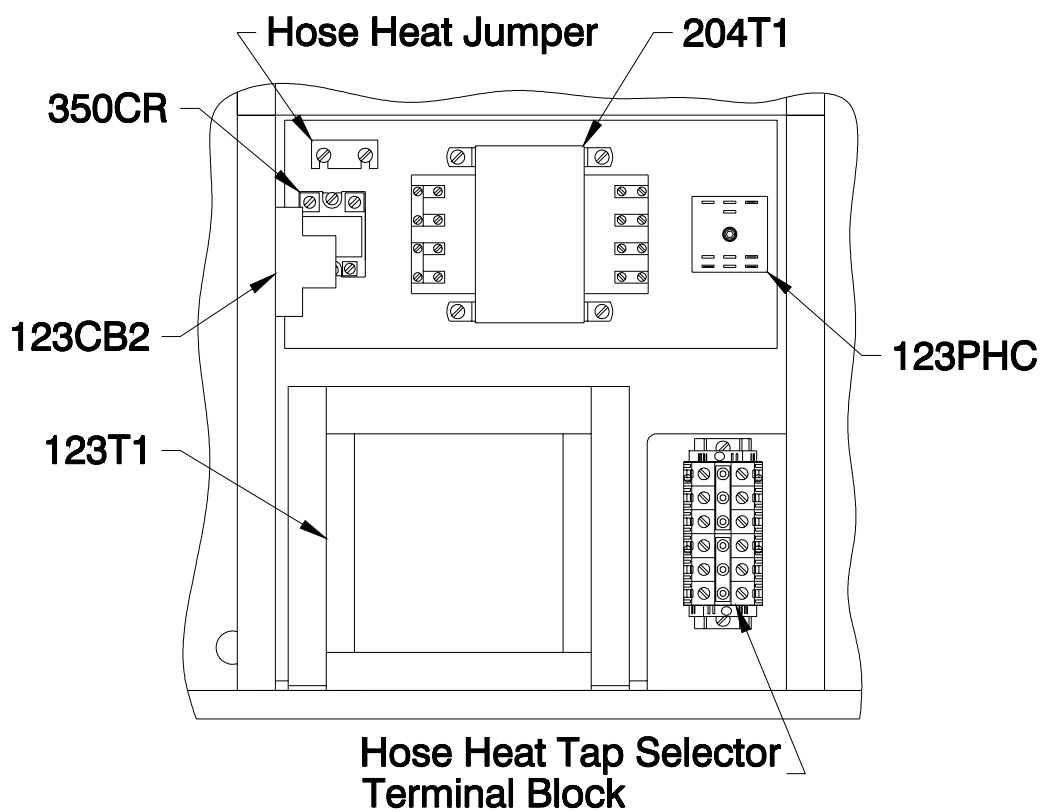


Figure 10 Electrical Components (Sheet 2 of 2)

Note: For schematic symbol part numbers and descriptions see Table 9 on page 40.

ELECTRICAL SCHEMATICS

230 Volt Single Phase

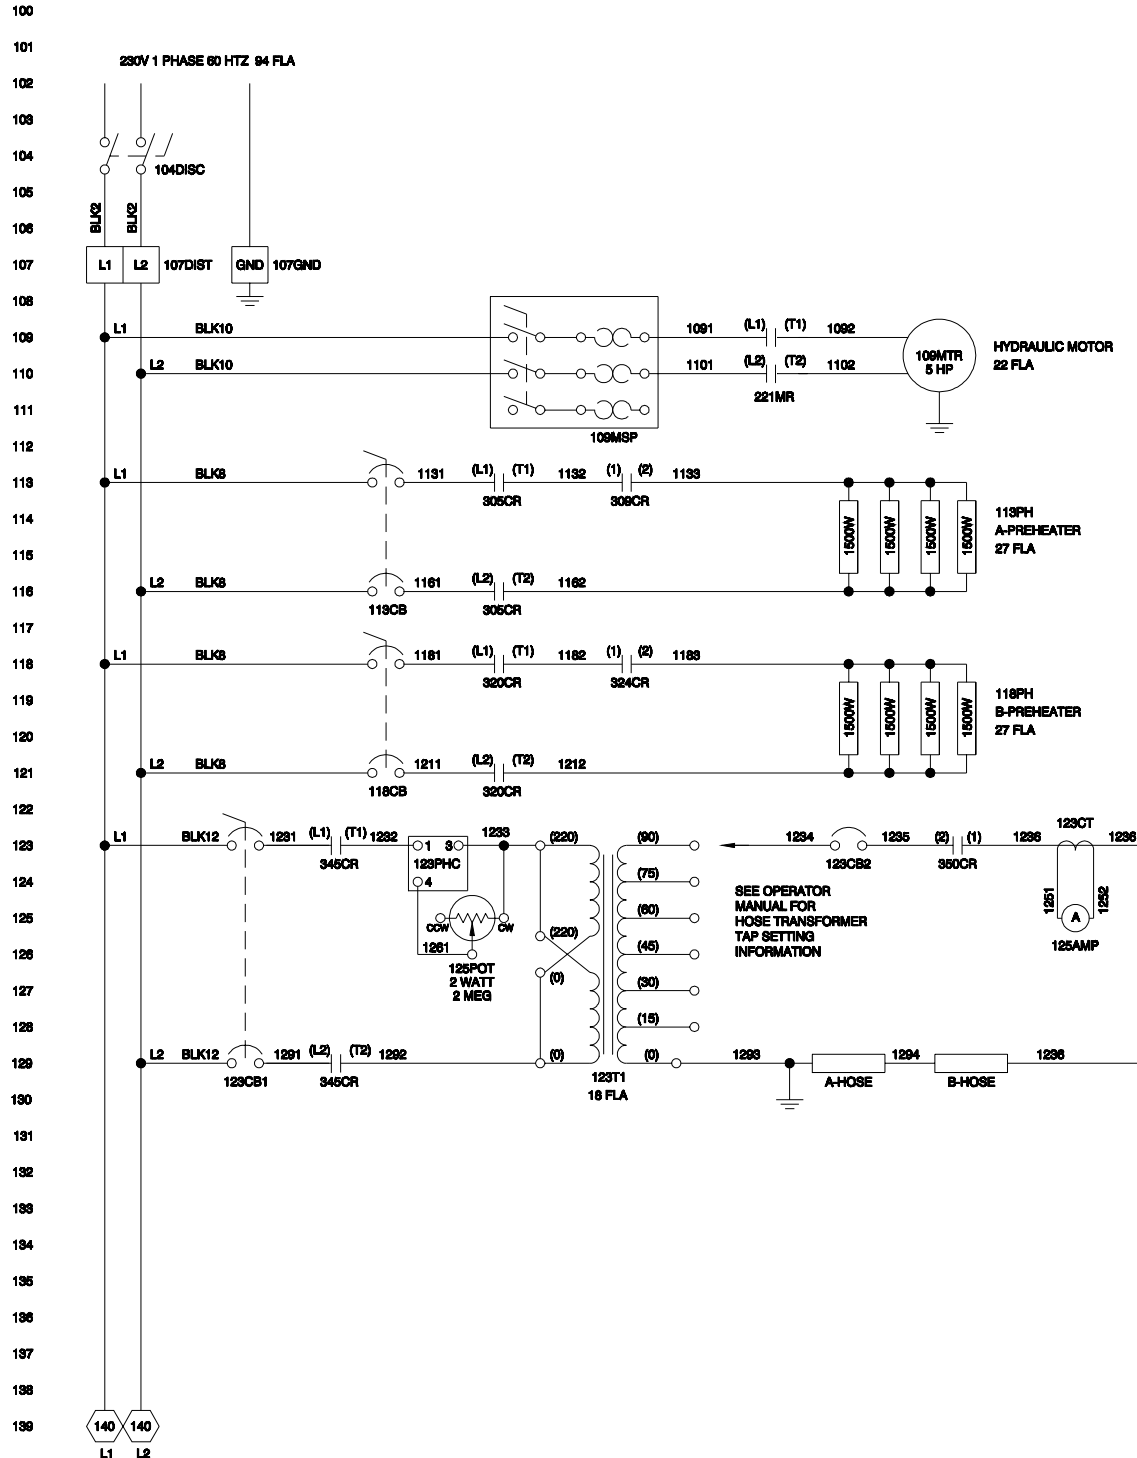


Figure 11 Electrical Schematic 230 Volt Single Phase, (Sheet 1 of 6)

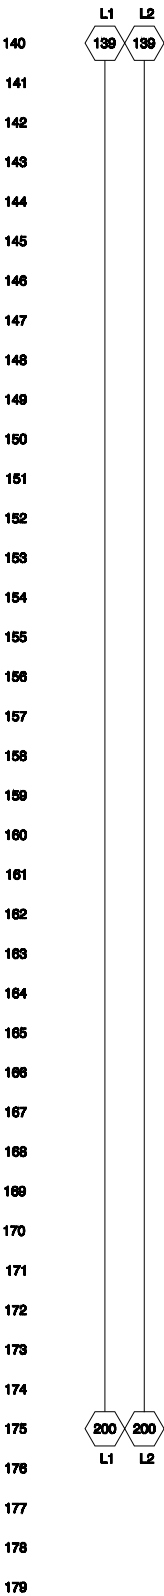


Figure 12 Electrical Schematic 230 Volt Single Phase, (Sheet 2 of 6)

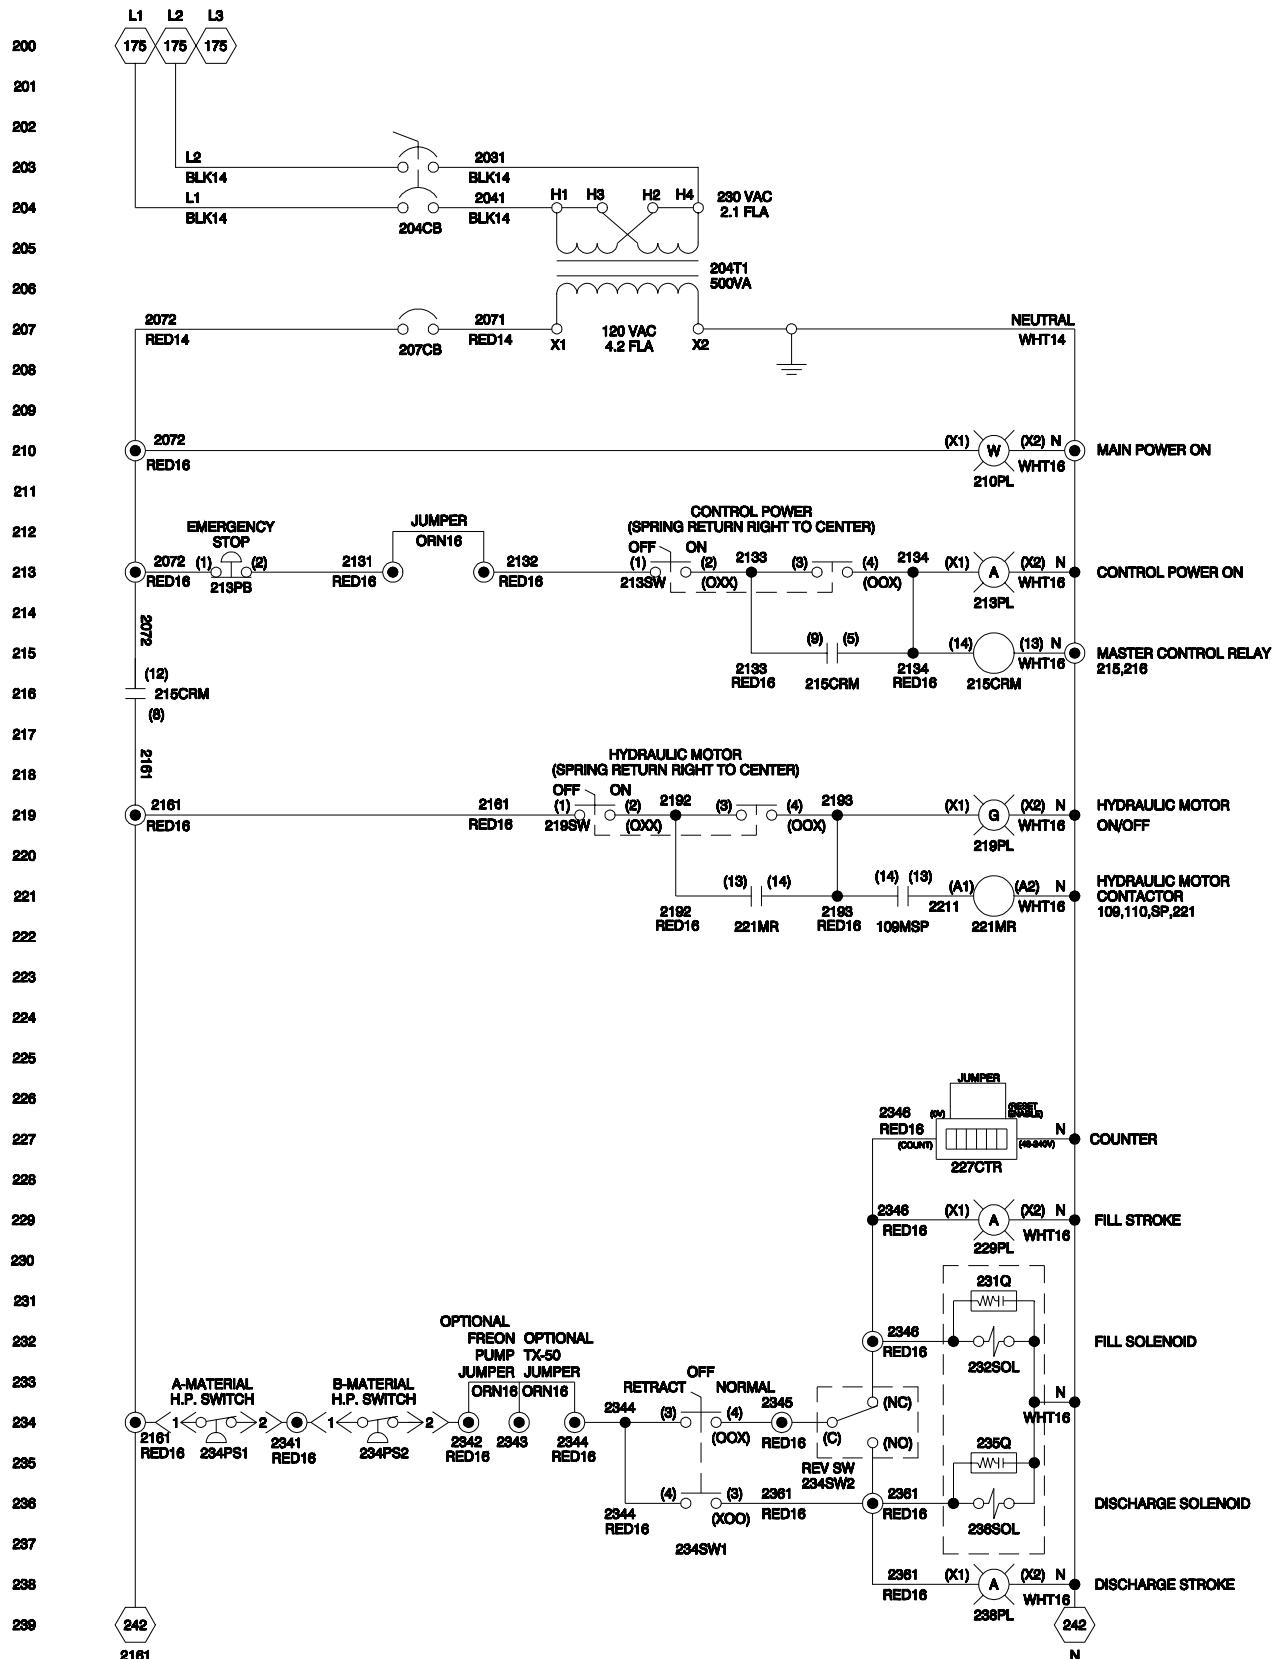


Figure 13 Electrical Schematic 230 Volt Single Phase, (Sheet 3 of 6)

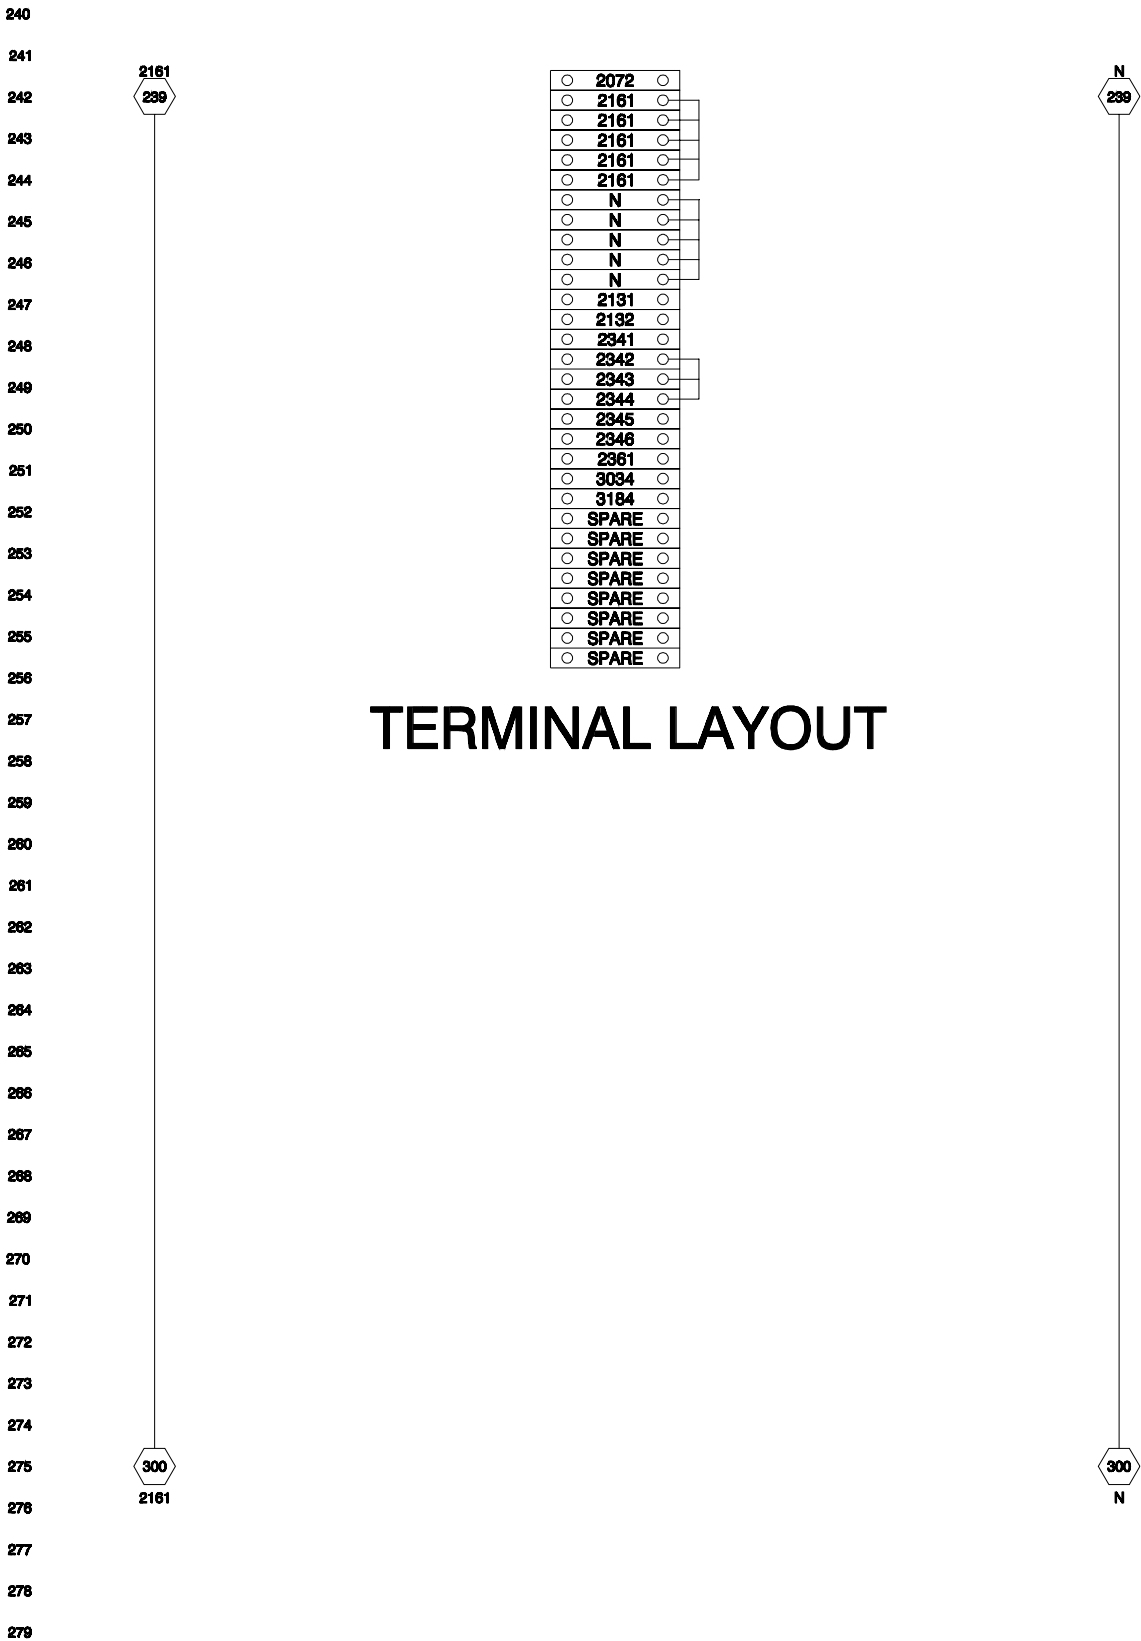



Figure 14 Electrical Schematic 230 Volt Single Phase, (Sheet 4 of 6)

 

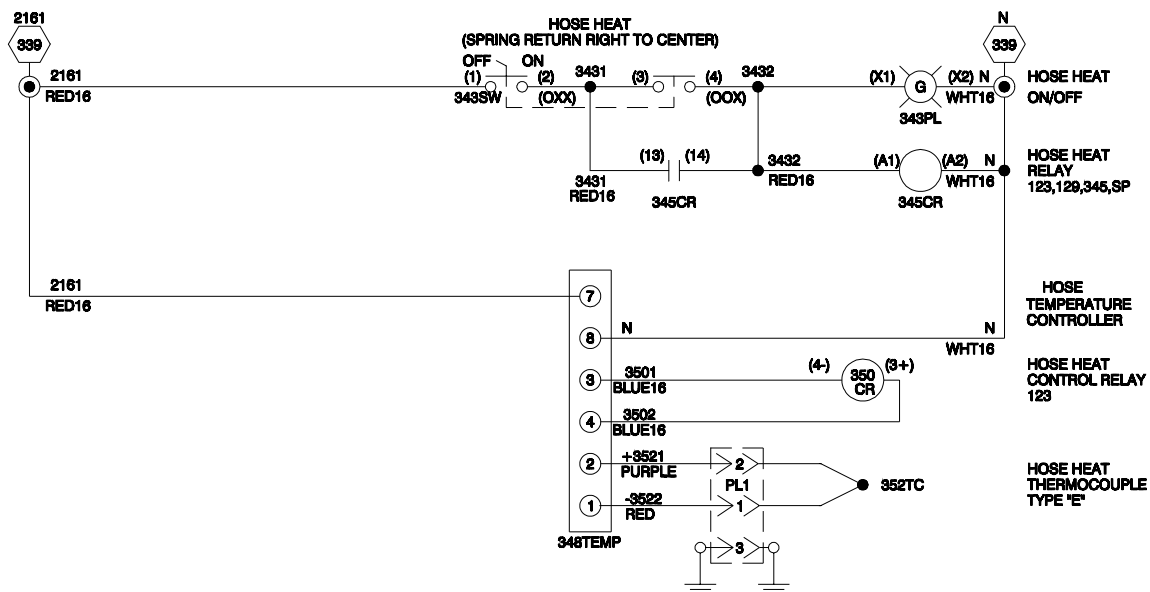


Figure 16 Electrical Schematic 230 Volt Single Phase, (Sheet 6 of 6)

230 Volt 3 Phase

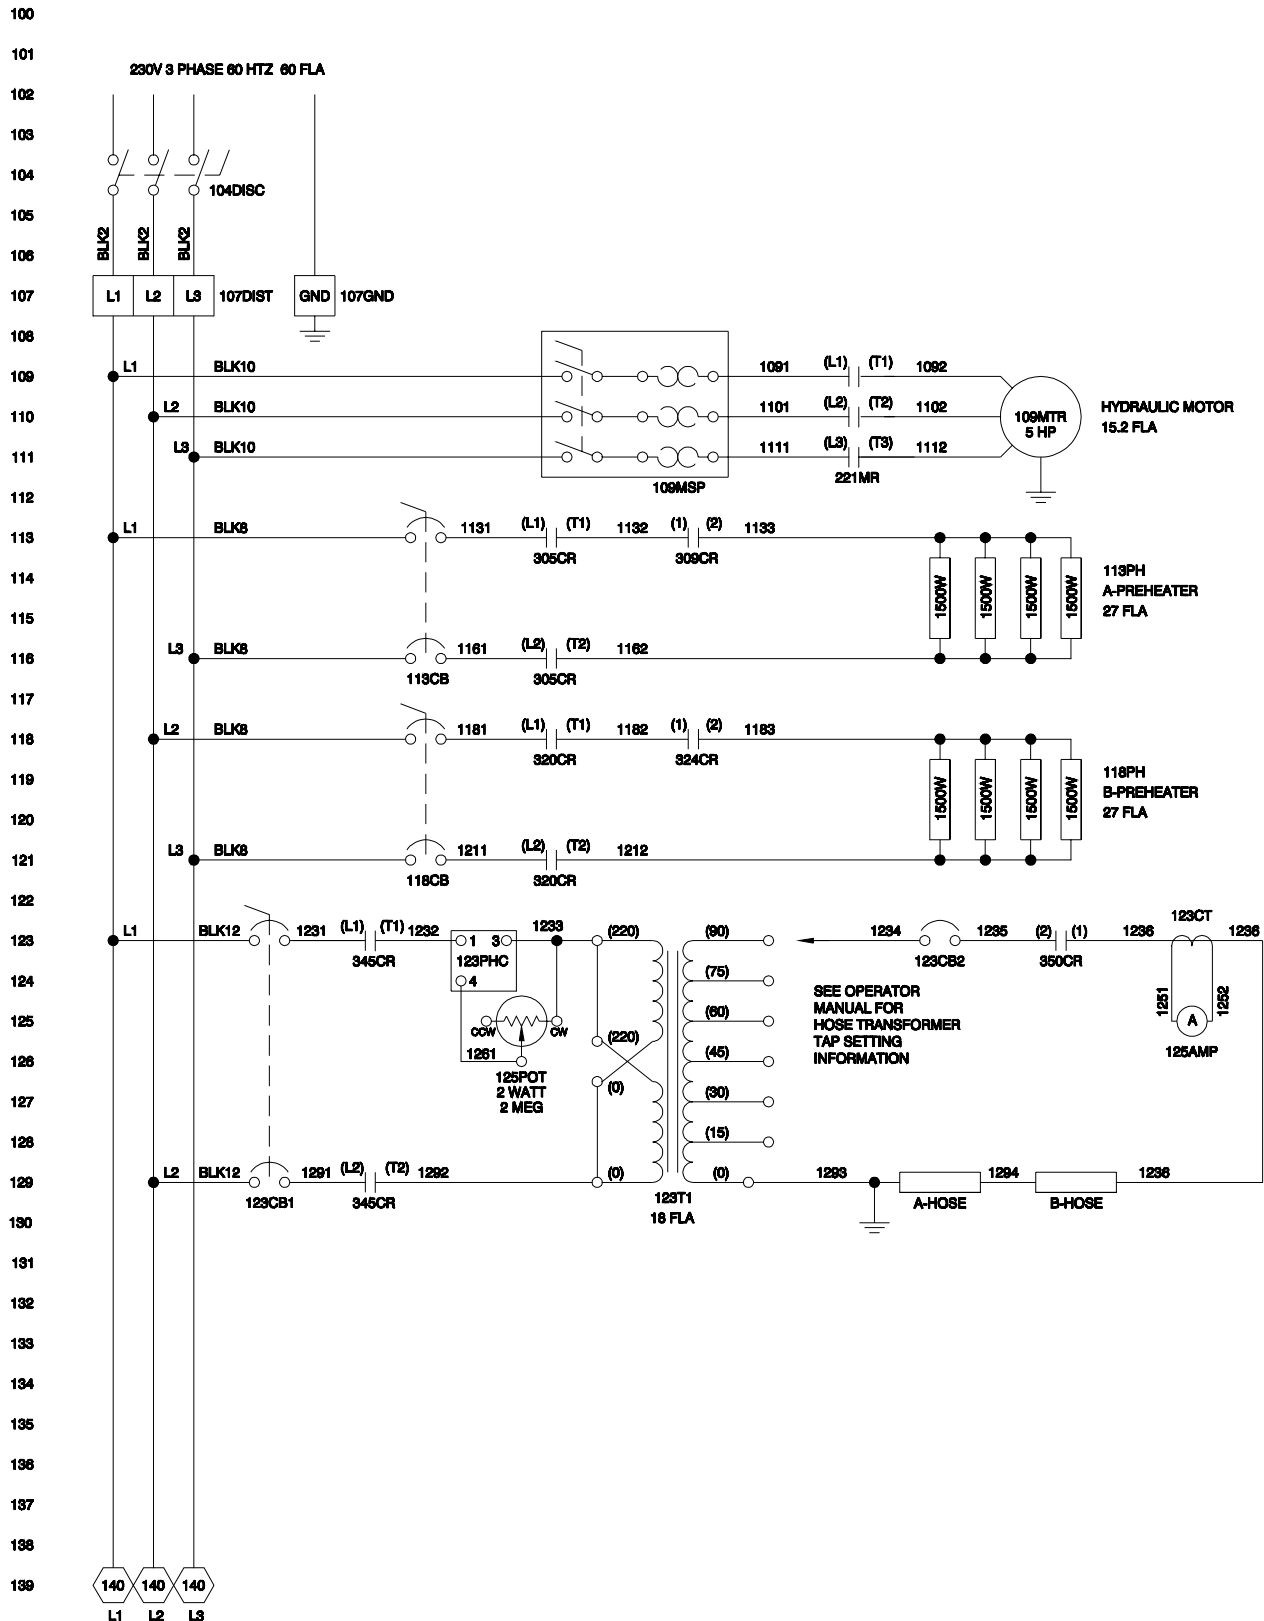


Figure 17 Electrical Schematic 230 Volt 3 Phase, (Sheet 1 of 6)

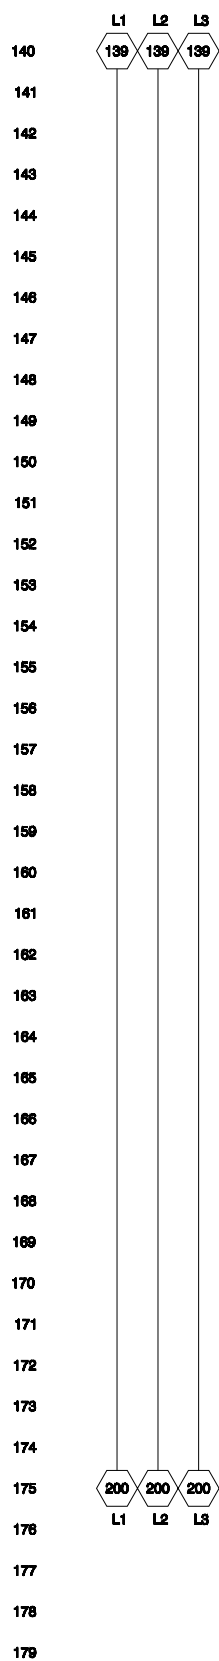


Figure 18 Electrical Schematic 230 Volt 3 Phase, (Sheet 2 of 6)

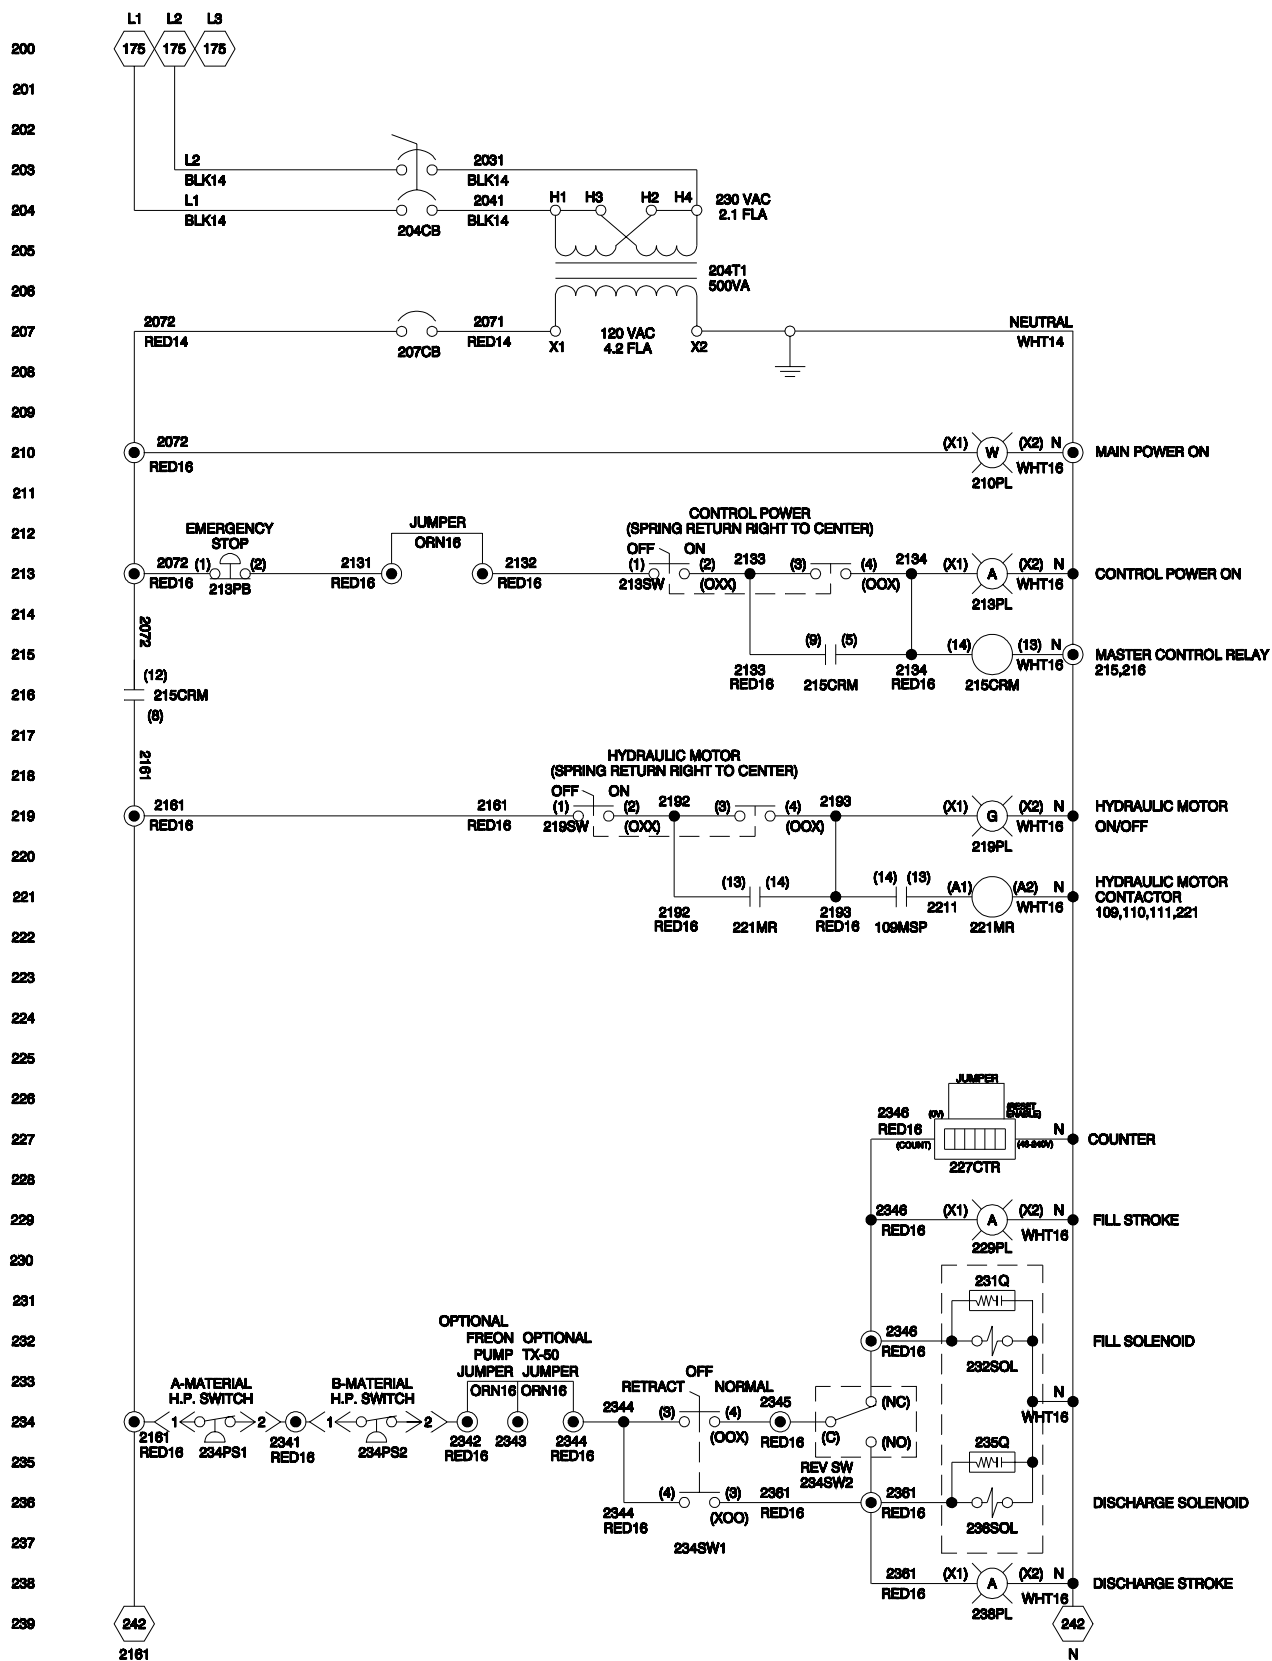


Figure 19 Electrical Schematic 230 Volt 3 Phase, (Sheet 3 of 6)

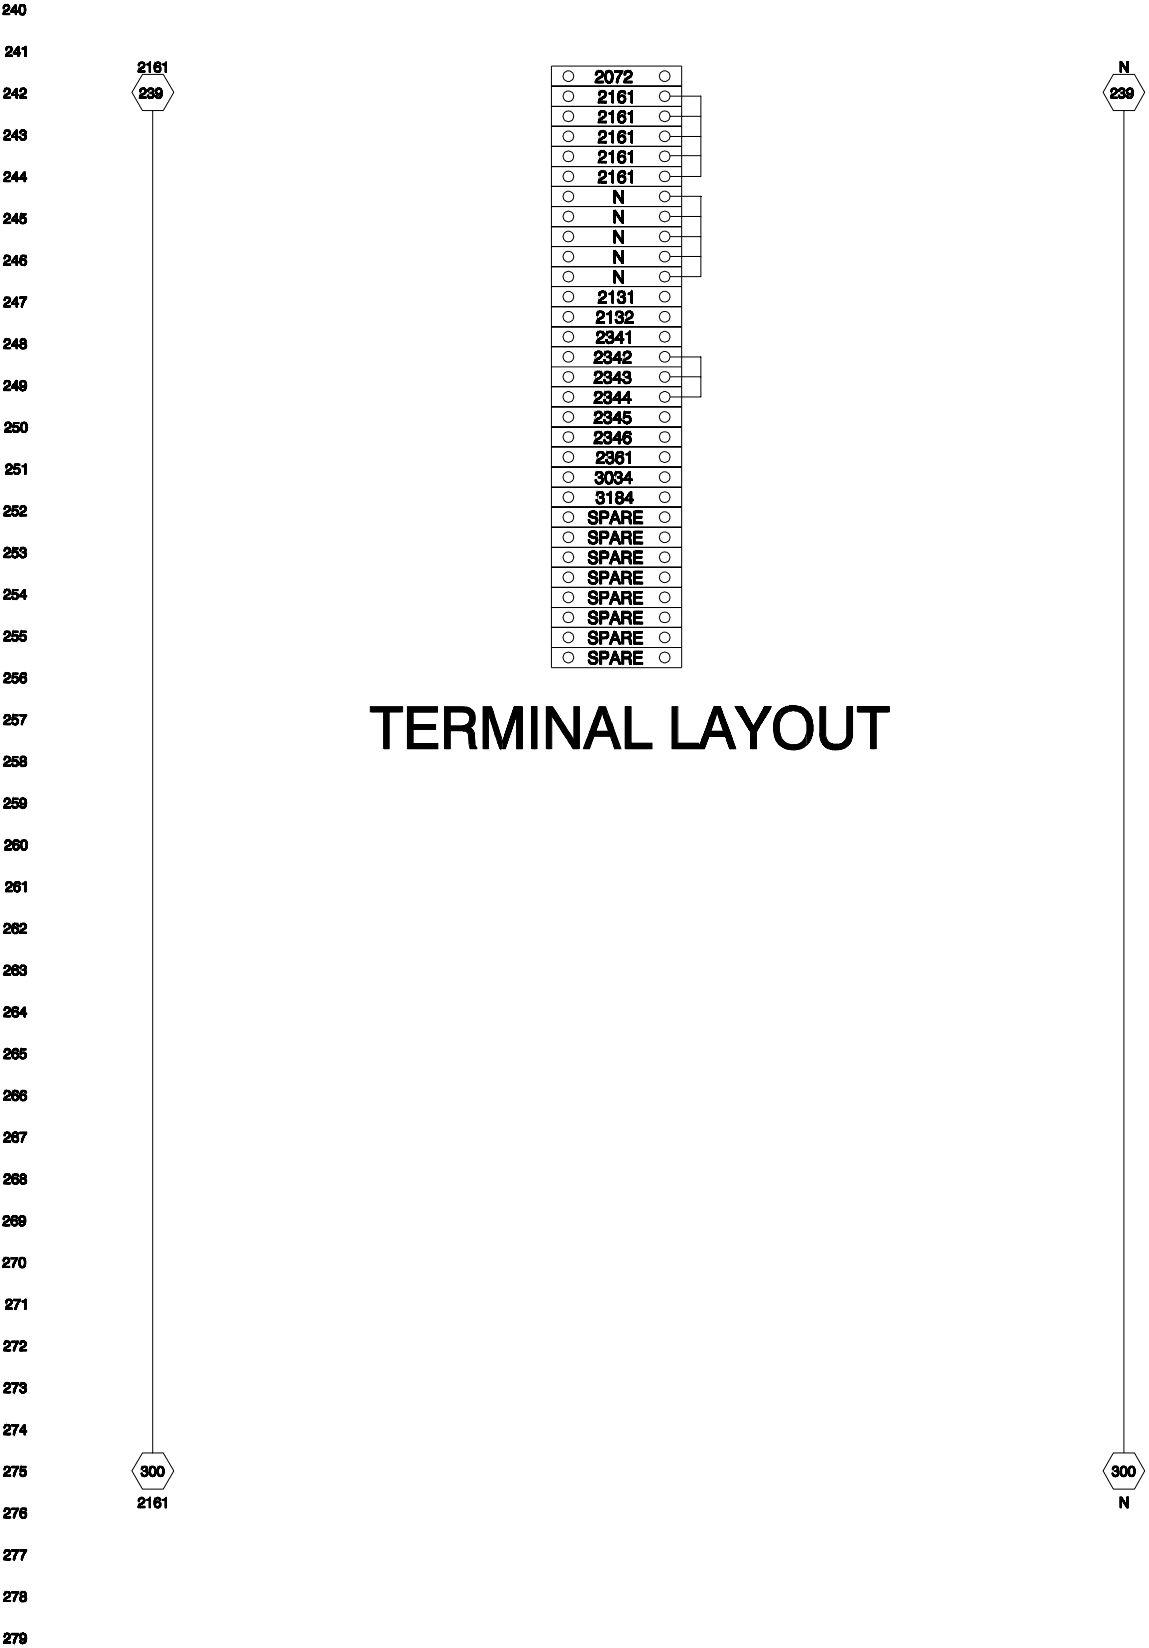



Figure 20 Electrical Schematic 230 Volt 3 Phase, (Sheet 4 of 6)

 

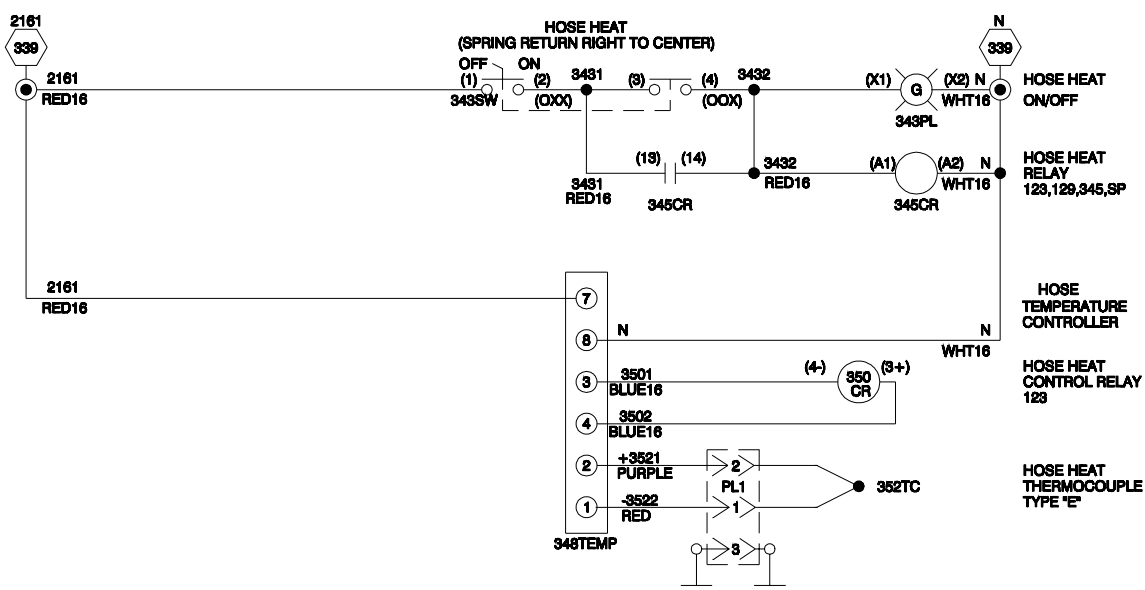


Figure 22 Electrical Schematic 230 Volt 3 Phase, (Sheet 6 of 6)

380 Volt 3 Phase

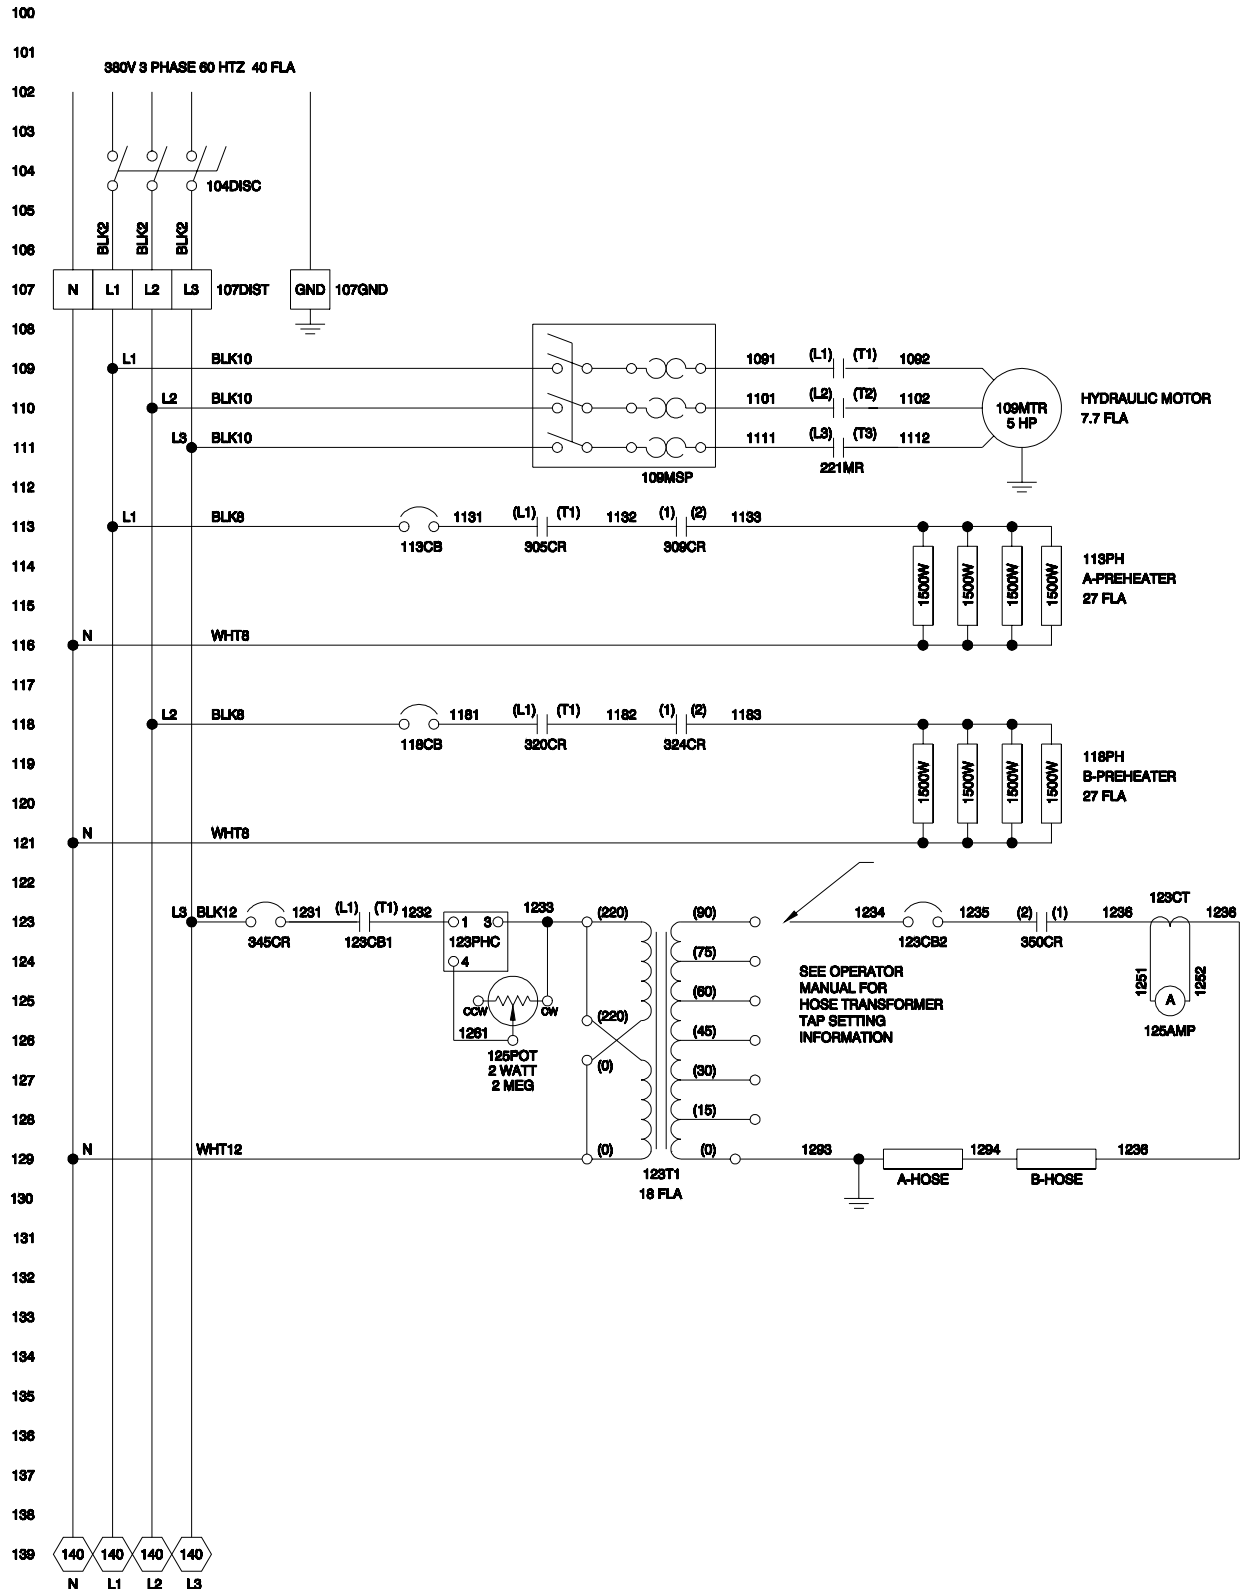


Figure 23 Electrical Schematic 380 Volt 3 Phase, (Sheet 1 of 6)

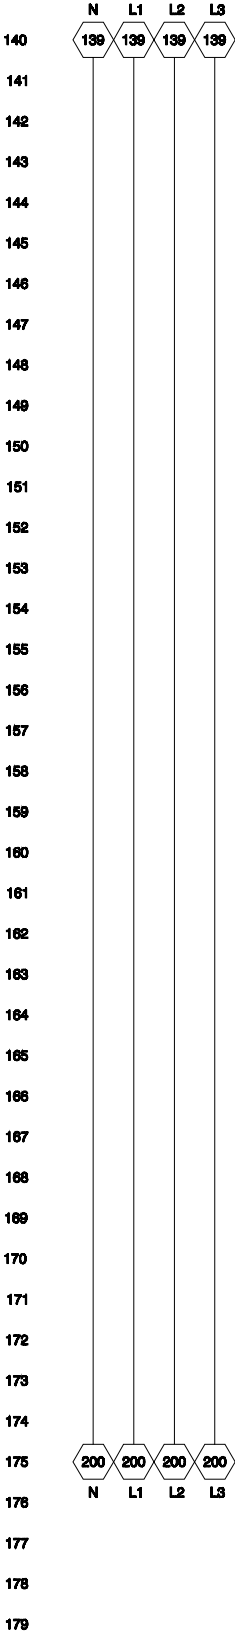


Figure 24 Electrical Schematic 380 Volt 3 Phase, (Sheet 2 of 6)


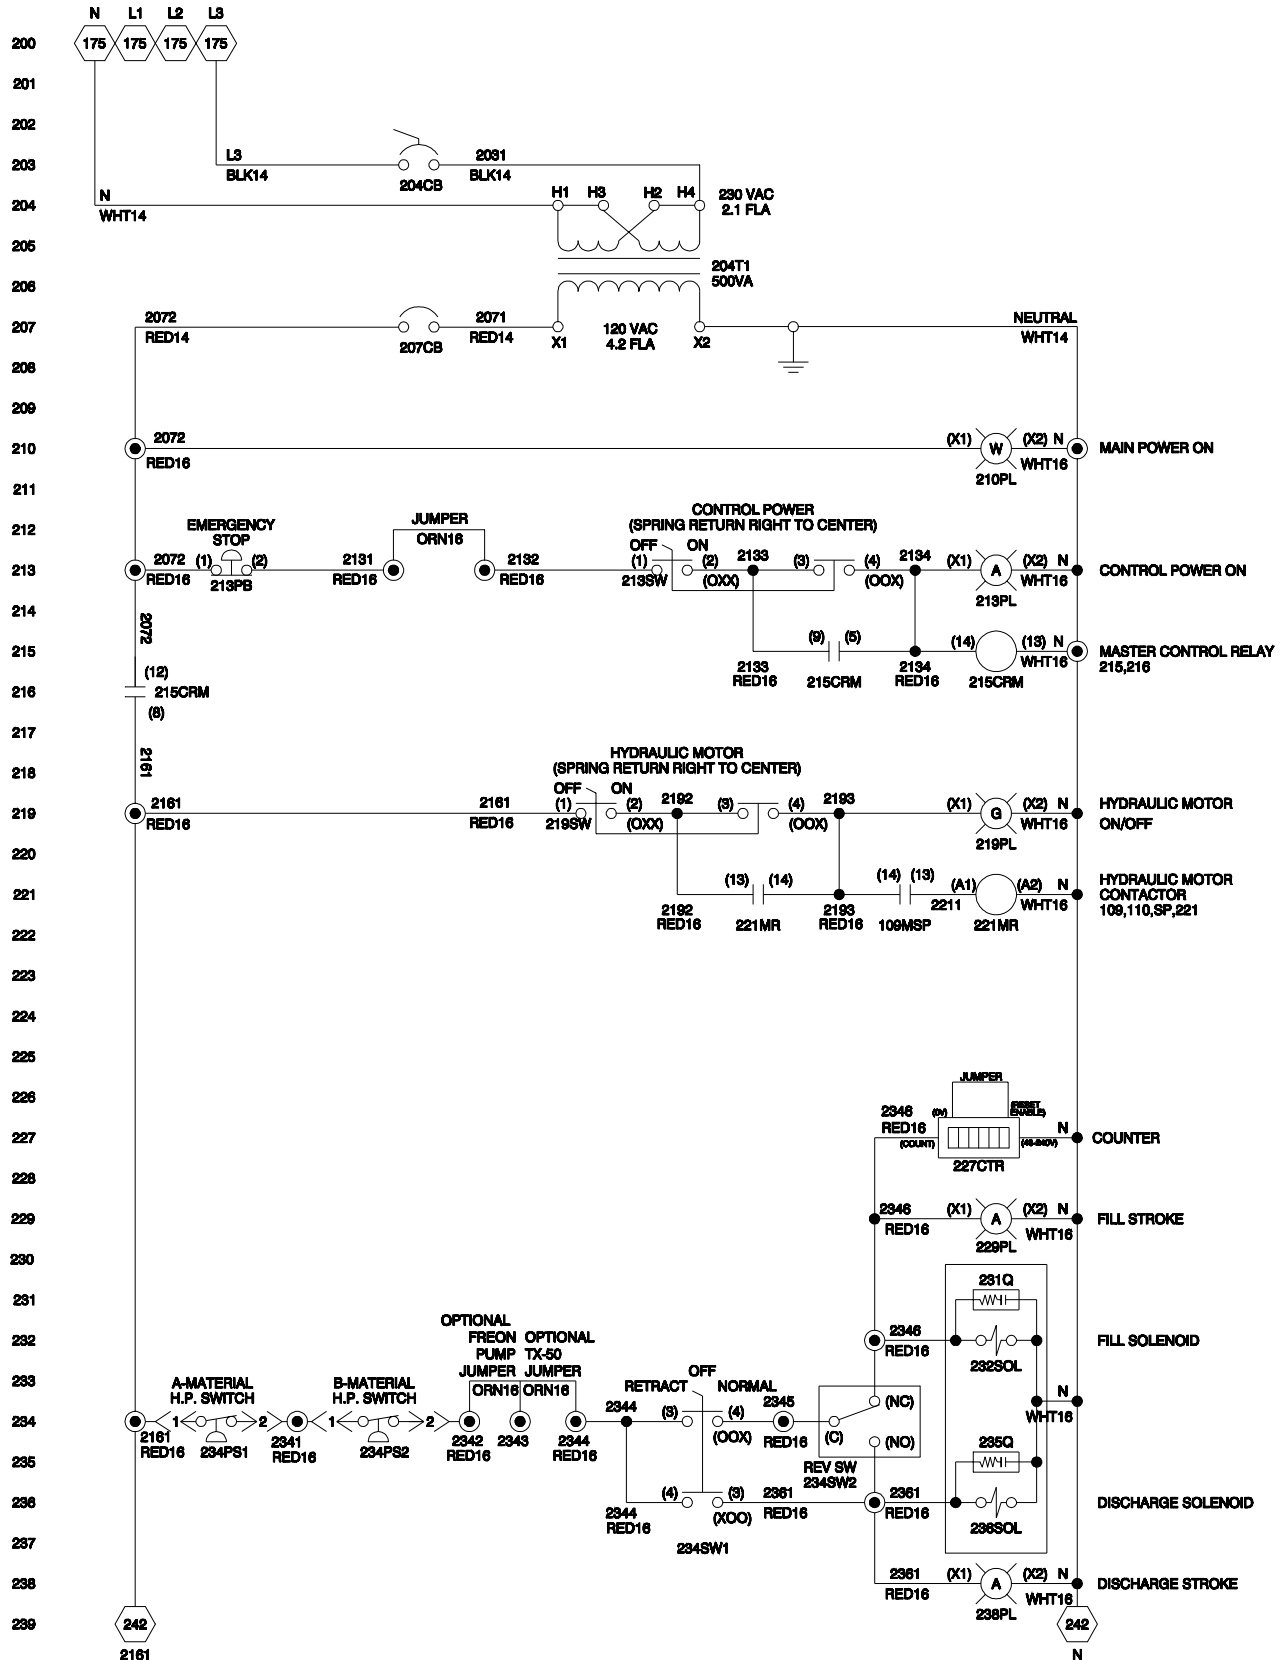


Figure 25 Electrical Schematic 380 Volt 3 Phase, (Sheet 3 of 6)

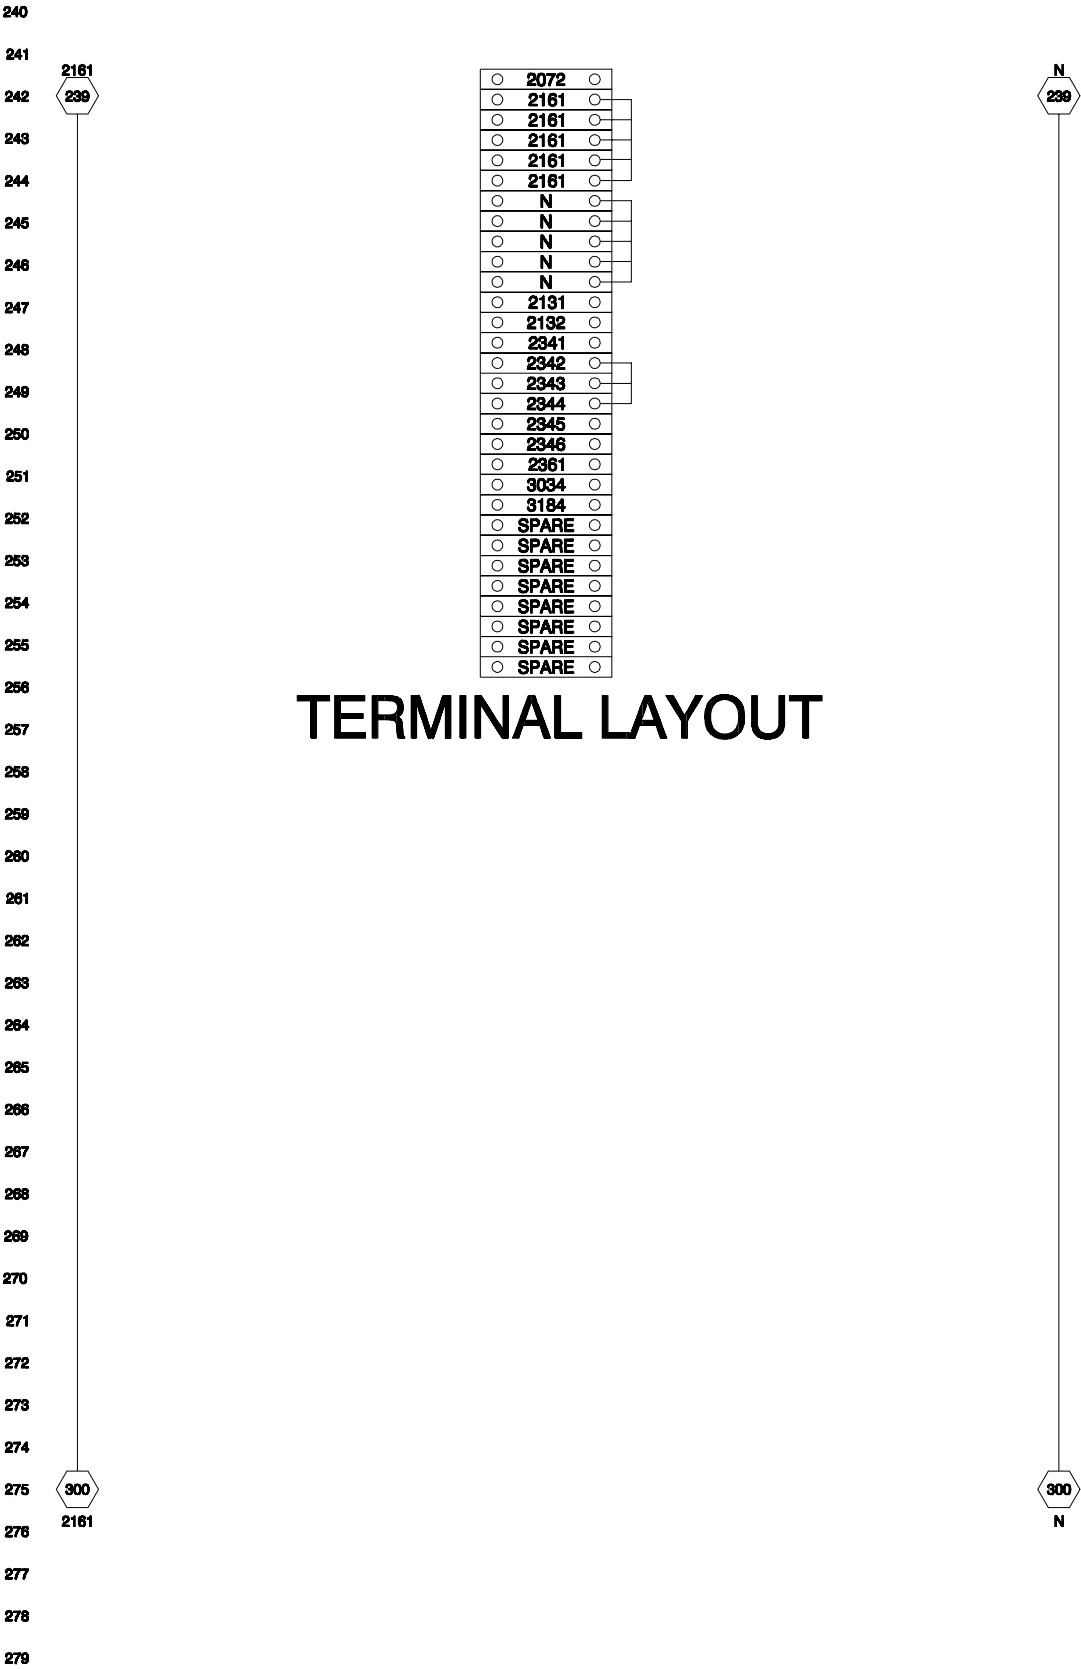

TERMINAL LAYOUT

Figure 26 Electrical Schematic 380 Volt 3 Phase, (Sheet 4 of 6)

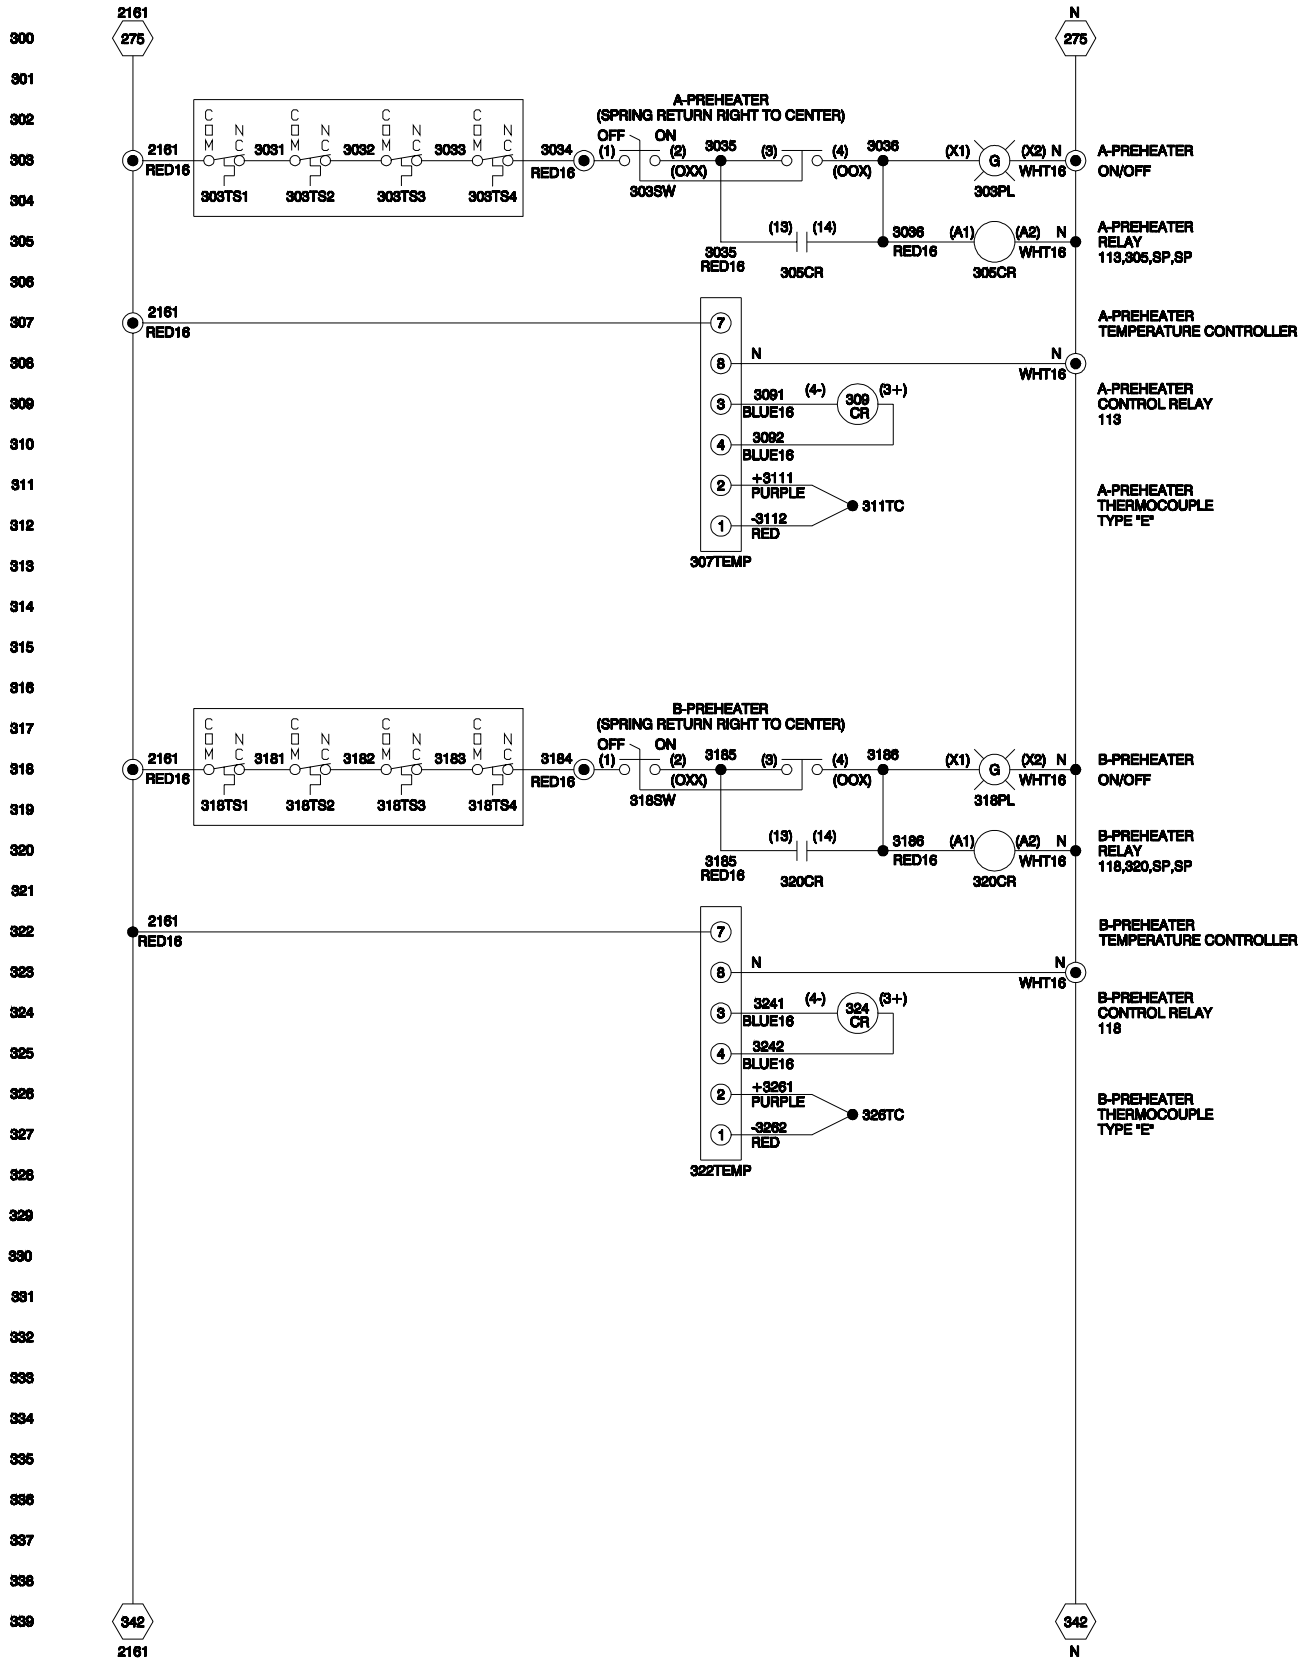


Figure 27 Electrical Schematic 380 Volt 3 Phase, (Sheet 5 of 6)



TABLE 9 ELECTRICAL SCHEMATIC, (PARTS LIST)

Reference Letter	Part Number	Description	Quantity
104DISC	6690-16-143	Disconnect	1
	6690-16-144	Disconnect Handle	1
107DIST	6690-20-10-3	3 Pole Terminal Block	1
107GND	1645-1-1	Ground Terminal Block	1
107N	6690-20-10-1	Neutral Terminal Block	1
109MSP			
	6690-27-89	Motor Circuit Protector (1x230 60HZ)	1
	6690-27-88	Motor Circuit Protector (3x230V)	1
	6690-27-82	Motor Circuit Protector (3x380V)	1
109MTR			
	6691-46	5HP Single Phase 60Hz Motor (1x220 60Hz)	1
	6691-45	5HP Three Phase 50/60 Hz Motor (3x230V)	1
	6691-45	5HP Three Phase 50/60 Hz Motor (3x380V)	1
113CB			
	6690-25-22	Circuit Breaker for 6000W Heater (1x220 60Hz)	1
	6690-25-22	Circuit Breaker for 6000W Heater (3x230V)	1
	6690-25-21	Circuit Breaker for 6000W Heater (3x380V)	1
113PH			
	42300-8-220	1500 Watt Cartridge Heater (1x220 60Hz)	4
	42300-8-220	1500 Watt Cartridge Heater (3x230V)	4
	42300-8-220	1500 Watt Cartridge Heater (3x380V)	4
118CB			
	6690-25-22	Circuit Breaker for 6000W Heater (1x220 60Hz)	1
	6690-25-22	Circuit Breaker for 6000W Heater (3x230V)	1
	6690-25-21	Circuit Breaker for 6000W Heater (3x380V)	1
118PH			
	42300-8-220	1500 Watt Cartridge Heater (1x220 60Hz)	4
	42300-8-220	1500 Watt Cartridge Heater (3x230V)	4
	42300-8-220	1500 Watt Cartridge Heater (3x380V)	4
123CB1			
	6690-25-24	Circuit Breaker (1x220 60Hz)	1
	6690-25-24	Circuit Breaker (3x230V)	1
	6690-25-23	Circuit Breaker (3x380V)	1
123CB2	6690-25-28	Circuit Breaker	1
123PHC			
	6690-26-18	230V Phase Controller (1x220 60Hz)	1
	6690-26-18	230V Phase Controller (3x230V)	1
	6690-26-18	230V Phase Controller (3x380V)	1
123T1	6690-15-28	Multi-Tap Hose Transformer	1
123CT	6690-29-28-1	Ammeter Current Transformer	1
125POT			
	6690-5-17	Potentiometer (1x220 60Hz)	1
	6690-5-17	Potentiometer (3x230V)	1
	6690-5-17	Potentiometer (3x380V)	1
125AMP	6690-29-28	0-75A Ammeter	1
204CB			
	6690-25-43	Circuit Breaker (1x220 60Hz)	1
	6690-25-43	Circuit Breaker (3x230V)	1
	6690-25-37	Circuit Breaker (3x380V)	1

Reference Letter	Part Number	Description	Quantity
204T1	6690-15-27	120VAC Control Transformer	1
207CB	6690-25-36	Circuit Breaker	1
210PL	6690-19-15-17	Light Base	1
	6690-19-15-19	Pilot Light w/o Lens	1
	6690-19-15-11	Mounting Latch	1
	6690-19-15-20	130V Lamp	1
	6690-19-15-14	Clear Lens	1
213PB	6690-16-67	Red Mushroom Head Switch	1
	6690-19-15-11	Mounting Latch	1
	6690-16-59-1	N.O. Switch Block	1
	6690-16-60-1	N.C. Switch Block	1
	L0257	E-Stop Label	1
213SW	6690-16-145	Amber Switch	1
	6690-19-15-11	Mounting Latch	1
	6690-16-59-1	N.O. Switch Block	1
	6690-16-60-1	N.C. Switch Block	1
213PL	6690-19-15-17	Light Base	1
	6690-19-15-20	130V Lamp	1
215CRM	6690-1-57	Relay	1
	6690-1-58	Relay Base	1
219SW	6690-16-146	Green Lens	1
	6690-19-15-11	Mounting Latch	1
	6690-16-59-1	N.O. Switch Block	1
	6690-16-60-1	N.C. Switch Block	1
219PL	6690-19-15-17	Light Base	1
	6690-19-15-20	130V Lamp	1
221MR	6690-27-68	Contactor	1
227CTR	6690-29-27	Digital Counter	1
229PL	6690-19-15-17	Light Base	1
	6690-19-15-19	Pilot Light w/o Lens	1
	6690-19-15-11	Mounting Latch	1
	6690-19-15-20	130V Lamp	1
	6690-19-15-15	Amber Lens	1
231Q	6690-21-1	Quencharc	1
232SOL	6311-116-110-1	Replacement 120VAC Solenoid Coil	1
234PS1	6690-16-107	Pressure Switch	1
	6690-16-76-1	Din Connector	1
234PS2	6690-16-107	Pressure Switch	1
	6690-16-76-1	Din Connector	1
234SW1	6690-16-109	3 Position Switch	1
	6690-19-15-11	Mounting Latch	1
	6690-16-59-1	N.O. Switch Block	1
234SW2	0578A	Replacement Micro-Switch	1
235Q	6690-21-1	Quencharc	1
236SOL	6311-116-110-1	Replacement 120VAC Solenoid Coil	1
238PL	6690-19-15-17	Light Base	1
	6690-19-15-19	Pilot Light w/o Lens	1
	6690-19-15-11	Mounting Latch	1
	6690-19-15-20	130V Lamp	1
	6690-19-15-15	Amber Lens	1
303TS1	6690-7-26	Over Temperature Safety Switch	1

Reference Letter	Part Number	Description	Quantity
303TS2	6690-7-26	Over Temperature Safety Switch	1
303TS3	6690-7-26	Over Temperature Safety Switch	1
303TS4	6690-7-26	Over Temperature Safety Switch	1
303SW	6690-16-146	Green Switch	1
	6690-19-15-11	Mounting Latch	1
	6690-16-59-1	N.O. Switch Block	1
	6690-16-60-1	N.C. Switch Block	1
303PL	6690-19-15-17	Light Base	1
	6690-19-15-20	130V Lamp	1
305CR	6690-27-68	Contactor	1
307TEMP	6690-26-22-3	Temperature Controller	1
309CR	6690-1-55	SSR	1
311TC		Thermocouple	1
318TS1	6690-7-26	Over Temperature Safety Switch	1
318TS2	6690-7-26	Over Temperature Safety Switch	1
318TS3	6690-7-26	Over Temperature Safety Switch	1
318TS4	6690-7-26	Over Temperature Safety Switch	1
318SW	6690-16-146	Green Lens	1
	6690-19-15-11	Mounting Latch	1
	6690-16-59-1	N.O. Switch Block	1
	6690-16-60-1	N.C. Switch Block	1
318PL	6690-19-15-17	Light Base	1
	6690-19-15-20	130V Lamp	1
320CR	6690-27-68	Contactor	1
322TEMP	6690-26-22-3	Temperature Controller	1
324CR	6690-1-55	SSR	1
326TC		Thermocouple	1
343SW	6690-16-146	Green Lens	1
	6690-19-15-11	Mounting Latch	1
	6690-16-59-1	N.O. Switch Block	1
	6690-16-60-1	N.C. Switch Block	1
343PL	6690-19-15-17	Light Base	1
	6690-19-15-20	130V Lamp	1
345CR	6690-27-68	Contactor	1
348TEMP	6690-26-22-3	Temperature Controller	1
350CR	6690-1-7	SSR	1
352TC		TSU	1
	18650-7	TSU Replacement Plug Assembly	1

INSTRUCTION MANUAL DISCREPANCY REPORT

[illegible]

Instructions:

Complete the above fields of the form by following the instructions listed on the reverse side of this sheet and mail to:

Gusmer Corporation

One Gusmer Drive PO Box 2055

Lakewood, NJ 08701

Field Number	Field Title	Description
1	Date	Enter date report is submitted.
2	Name	Enter name of person making report.
3	IM Number	Enter the Part Number of the Instruction Manual from the title page.
4	Issue Number	Enter the Issue number of the Instruction Manual from the title page. If there is no issue number, enter NONE .
5	Date of Issue	Enter the date of Issue of the Instruction Manual from the title page. If there is no issue date, enter NONE .
6	Page Number	Enter the page number containing the discrepancy
7	Discrepancy	Provide a brief description of discrepancy

NOTE: You may send a marked copy of the page as an attachment to your submittal.